

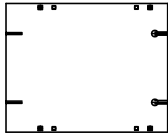
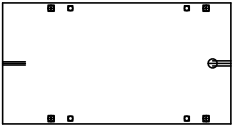

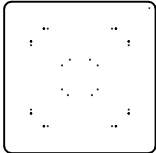



3TR4848

Assembly Instructions


S/N	PIC	QTY	S/N	PIC	QTY
1# Board	 764×252MM	2	A		64
2# Board	 800×252MM	2	B		64
3# Board	 377×264MM	2			
4# Board	 377×300MM	2			
5# Board	 377×200MM	2			
6# Board	 377×164MM	2			
7# Board	 1210×1210MM	1			
8# Board	 914×914MM	1			
9# Board	 605×605MM	1			

377×200MM



5# 2pcs

377×164MM



6# 2pcs








A



B

Step 1

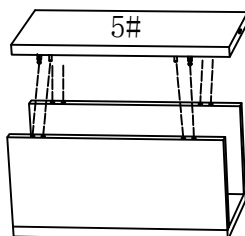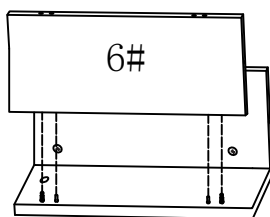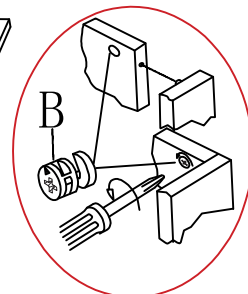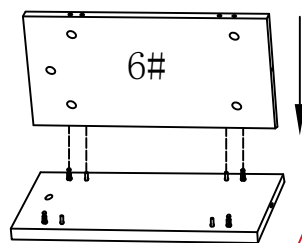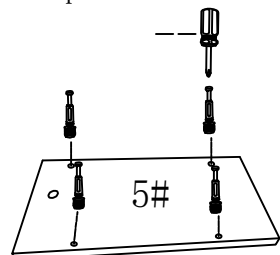

Fasten panels together and make sure all cams are locked.

605×605MM



9# 1pcs






A




B

Step 2

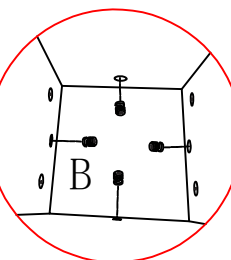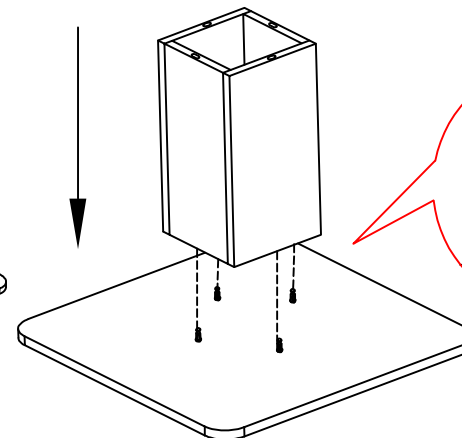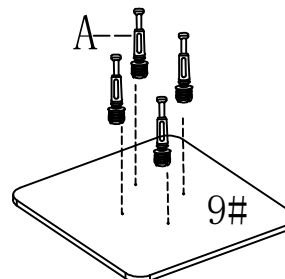

914×914MM



8# 1pcs





A




B

Step 3

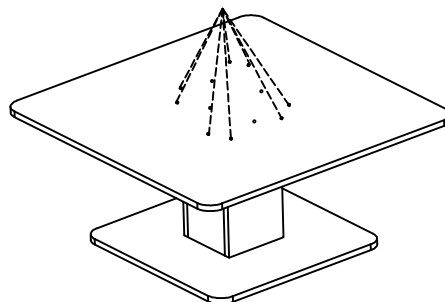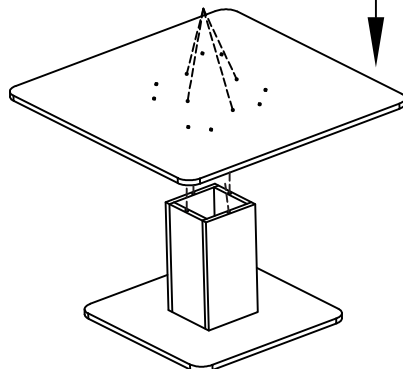


377×264MM




3# 2pcs

377×300MM



4# 2pcs









A



B

Step 4

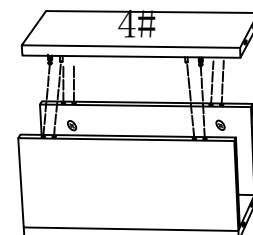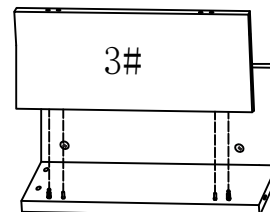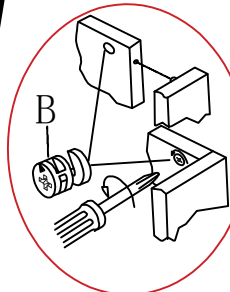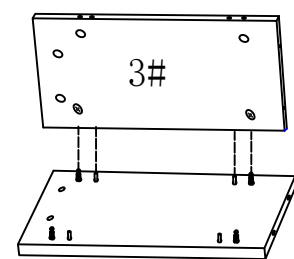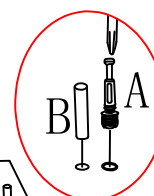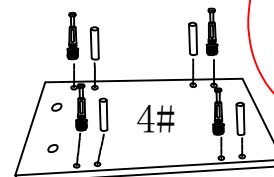

Fasten panels together and make sure all cams are locked.




B




A

Step 5

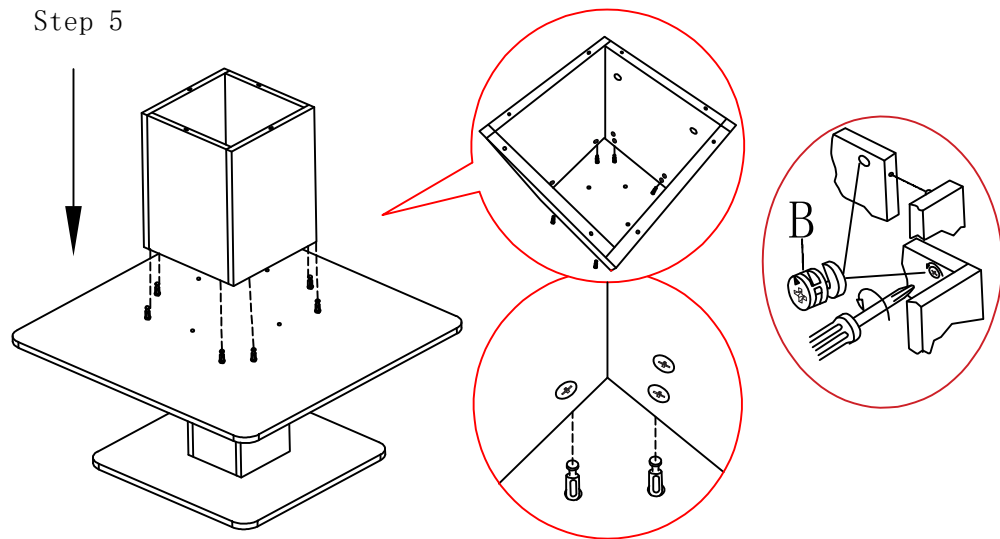

1210×1210MM



7# 1pcs




A



B

Step 6

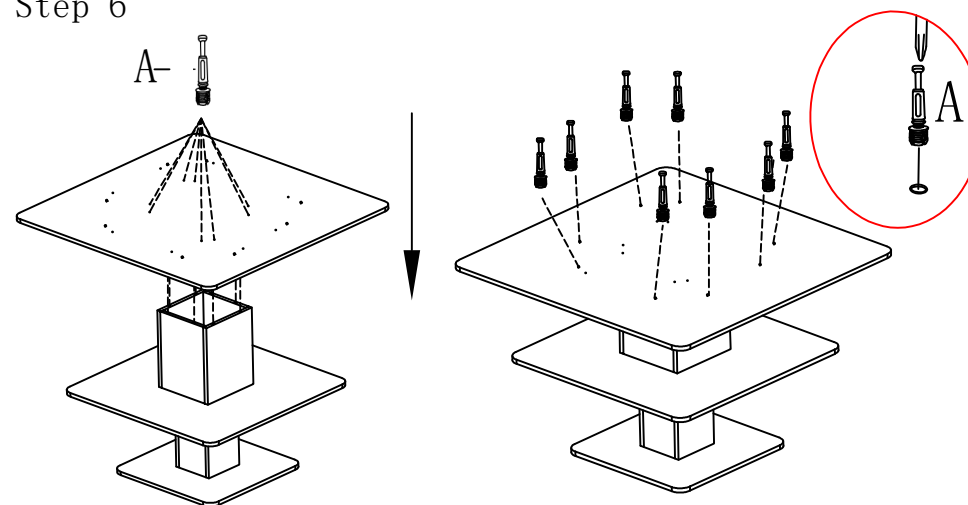


764×252MM



1# 2pcs

800×252MM



2# 2pcs




A



B

Step 7

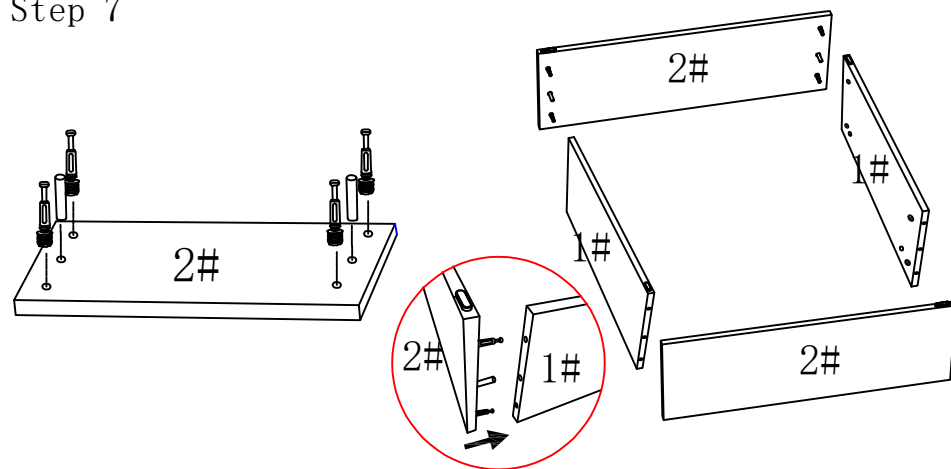

Step 8

