



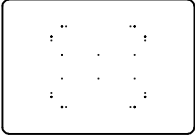



3TS6042

Assembly Instructions


S/N	PIC	QTY	S/N	PIC	QTY
1# Board	 620×252MM	2	A		66
2# Board	 762×252MM	2	B		66
3# Board	 744×377MM	2			
4# Board	 744×377MM	2			
5# Board	 863×168MM	2			
6# Board	 377×65MM	2			
7# Board	 1524×1066MM	1			
8# Board	 1474×863MM	1			
9# Board	 1320×457MM	1			

744×377MM



4# 2pcs

377×65MM



6# 2pcs






A




B

Step 1

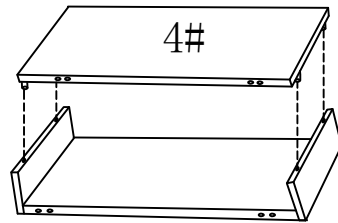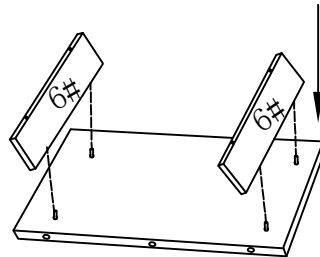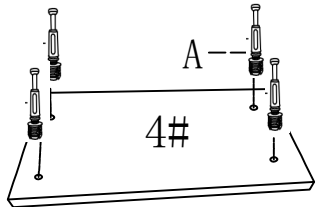

1320×457MM



9# 1pcs




A




B

Step 2

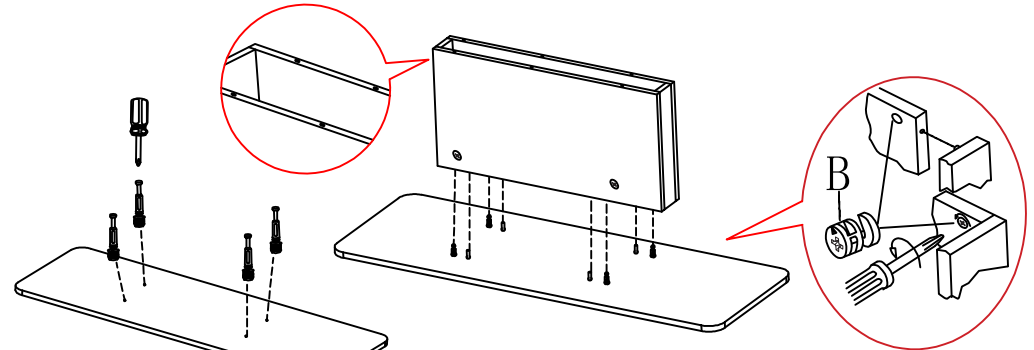

Fasten panels together and make sure all cams are locked.

1474×863MM



8# 1pcs




A




B


Step 3

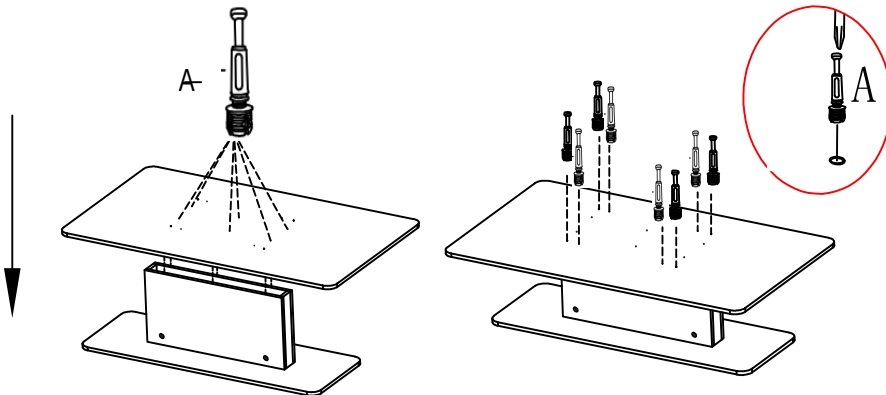

744×377MM 863×168MM



3# 2pcs



5# 2pcs




A



B

Step 4

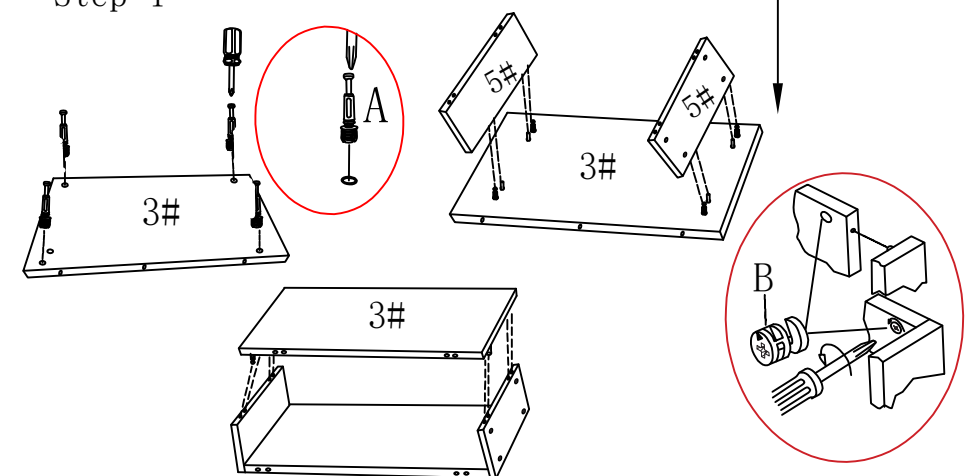




B




A

Step 5

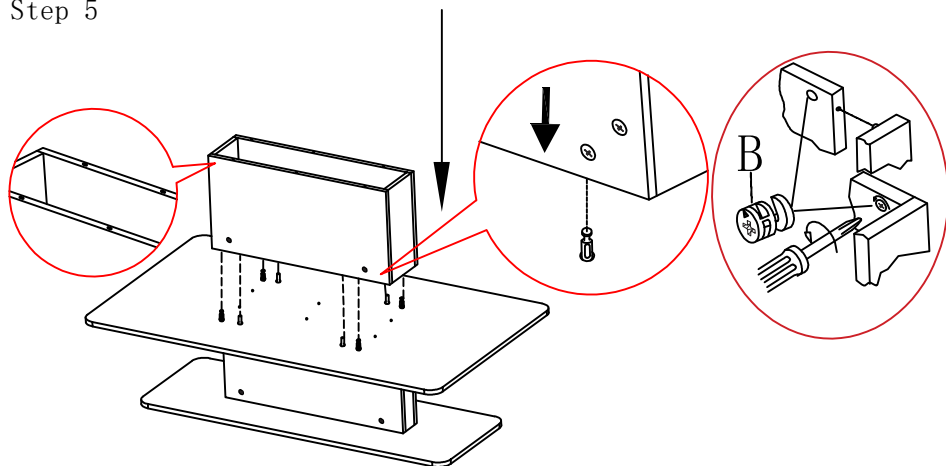

1524×1066MM



7# 1pcs




A



B

Step 6

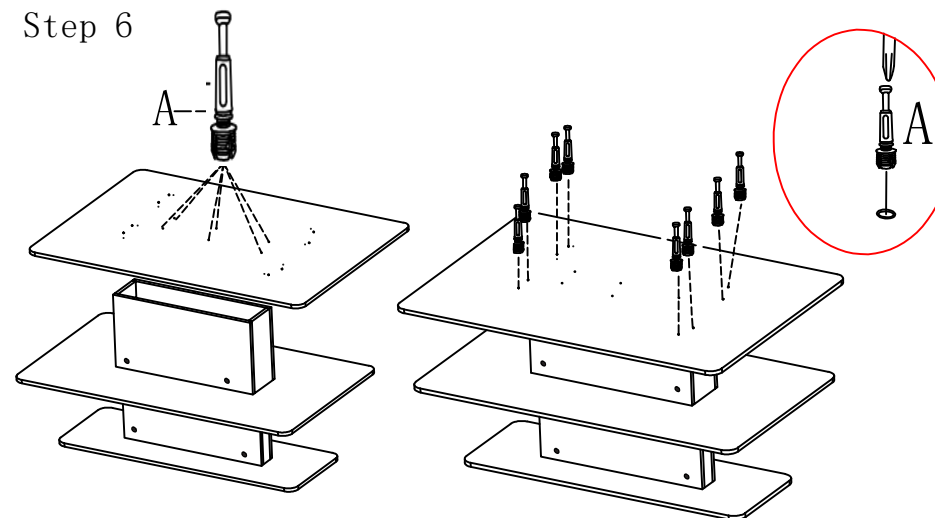


620×252MM



1# 2pcs

762×252MM



2# 2pcs




A



B

Step 7

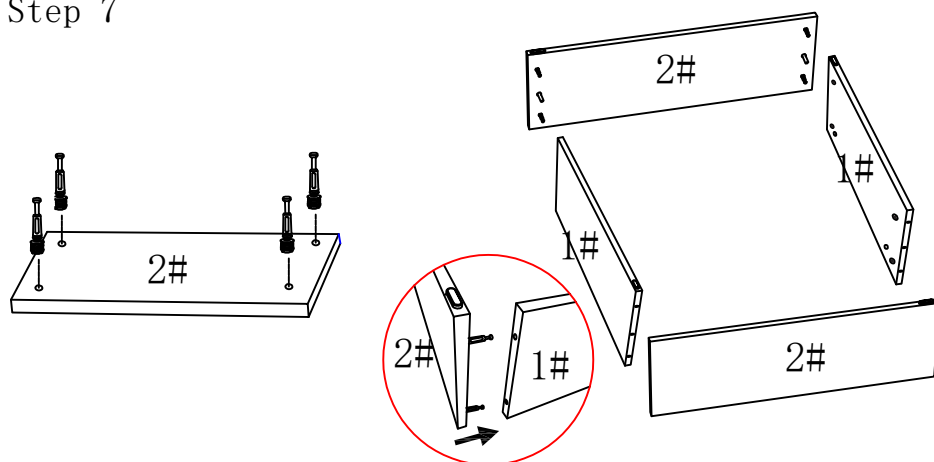

B

Step 8

