


ASSEMBLY INSTRUCTIONS

1: IDENTIFY ALL PIECES

PARTS (PIECES)

- A. ACRYLIC FRAME (2)
- B. STANDOFF CAP (4), (6) or (8)
- C. STANDOFF BARREL (4), (6) or (8)
- D. SCREW (4), (6) or (8)
- E. SPACER (8), (12) or (16)
- F. WALL ANCHOR (4), (6) or (8)

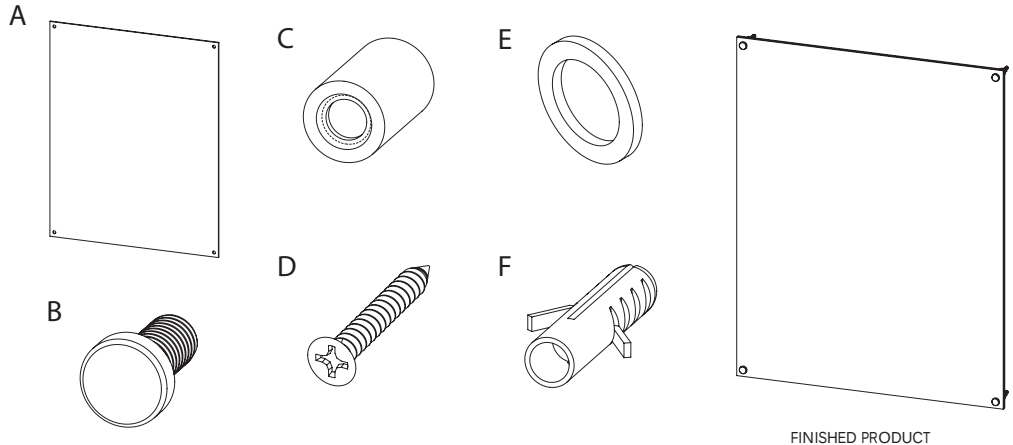

FINISHED PRODUCT


**PLEASE READ ALL INSTRUCTIONS
BEFORE ASSEMBLING**

2 PERSON ASSEMBLY RECOMMENDED/ SHEETROCK INSTALLATION

*TOOLS REQUIRED: 1 POWERDRILL WITH 7/32" DIAMETER DRILL BIT AND PHILLIPS HEAD SCREWDRIVER (NOT INCLUDED)

**FRAME SIZES VARY, EACH UNIT MAY CONTAIN 4, 6 OR 8 STANDOFFS

2: DRILL MOUNTING HOLES

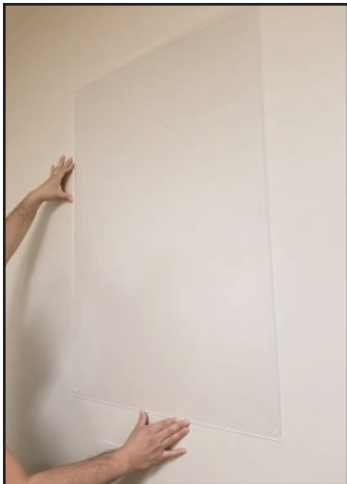

Using one of the Acrylic Frame (A) panels as a template, mark & drill (4), (6) or (8) 7/32" holes in the wall.


Note: Frame sizes vary and each unit may contain 4, 6 or 8 standoffs.



3: INSERT ANCHORS INTO THE WALL



Insert all supplied Wall Anchors (F) into the drilled holes on the wall. Make sure the Wall Anchors (F) are flush with the wall.

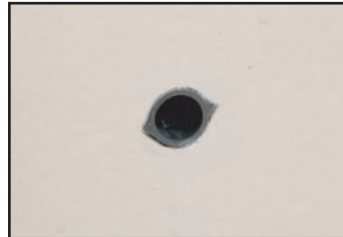

Note: If needed, use a rubber mallet to get the anchors flush with the wall.

4: SCREW STANDOFF BARREL



Using the supplied Screws (D), mount all the Standoff Barrels (C) onto the installed Wall Anchors (F) on the wall.



Note: Tighten all screws.

5: REMOVING PROTECTIVE FILM



Remove the protective film from both the front and back surface of each Acrylic Frame (A) panels.

ASSEMBLY INSTRUCTIONS

6: ADDING GRAPHIC



On a flat surface align and center the graphic onto one of the Acrylic Frame (A) panels and sandwich the second Acrylic Frame (A) panel over the graphic.

Note: The two frames are now assembled.

7: MOUNTING THE FRAMES



With the assistance of a second person, align the holes of the assembled frames over the holes of the Standoff Barrels (C).

Insert and hand tighten the Standoff Caps (B).

Note: Use clear Spacers (E) between metal hardware and clear panels.

8: FINISHED PRODUCT



The Acrylic Wall Mount Frames are assembled and mounted.