

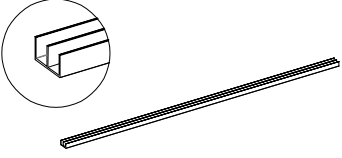

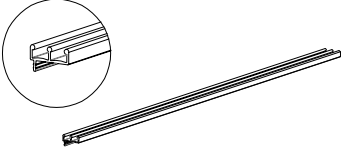
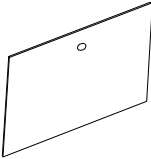
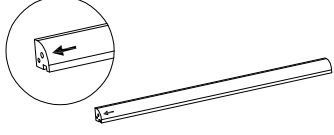
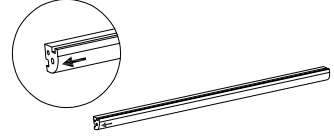
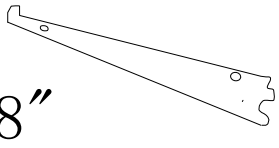

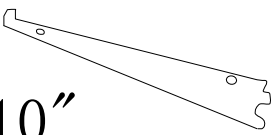


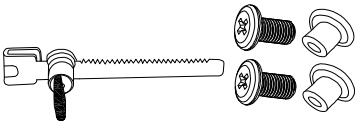


WRGS4

Assembly Instruction

S/N	PIC	QTY	S/N	PIC	QTY
1#		1	9# GLASS	 1120×203MM	1
2#		1	10# GLASS	 1120×254MM	1
3# AL		2	11# GLASS	 814×379MM	2
4# AL		1	12#		2
5#		2	13# Felt Strip		1
6#		2	14#	 8"	2
7# GLASS	 1143×377MM	1	15#	 10"	2
8# GLASS	 1142×814MM	1	16#	 L:827MM	2


parts list

S/N	PIC	QTY	S/N	PIC	QTY
19# Felt Strip		1	G		4
A	 M6 × 50MM	8	H Door handle		2
B	 M4 × 13MM	6			
C	 M4 × 19MM	2			
D		1			
E		1			
F	∅ 8 × 40MM 	8			

NOTE:

Please make sure that all parts above are fixed tightly before use.
This product is for indoor use only.
It is recommended that two persons assemble this unit.
Extra screws for spare using.

TOOLS REQUIRED

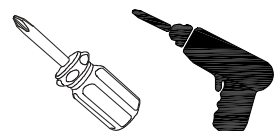


- 1143×377MM

- 7# 1pc

- 13# 1pc




Step 5

Cut off the felt strip according to the required size. Peel off the surface film and stick them in the corresponding position.


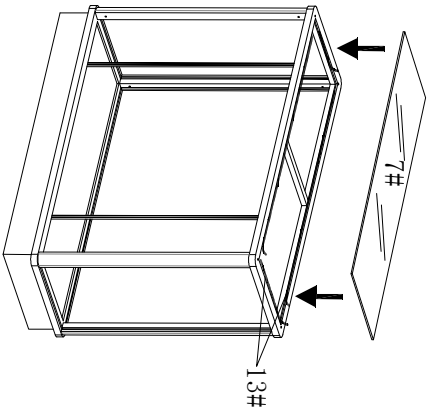


- 1120×254MM

- 10# 1pc

- 10"

- 15# 2pcs

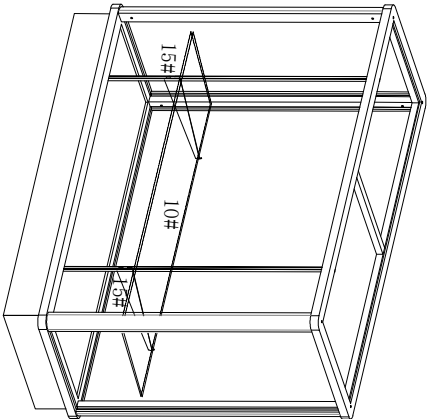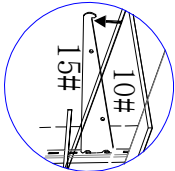
Step 6




- 1120×203MM

- 9# 1pc

- 8"

- 14# 2pcs


Step 7

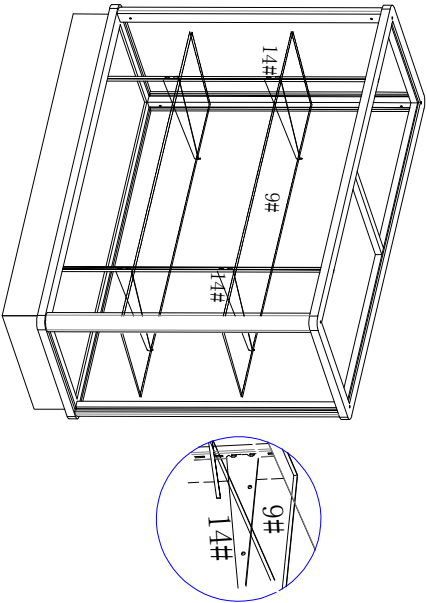


- 
- 3# 1pc

- 
- 4# 1pc

- M4×13

- B 2pcs


Step 8

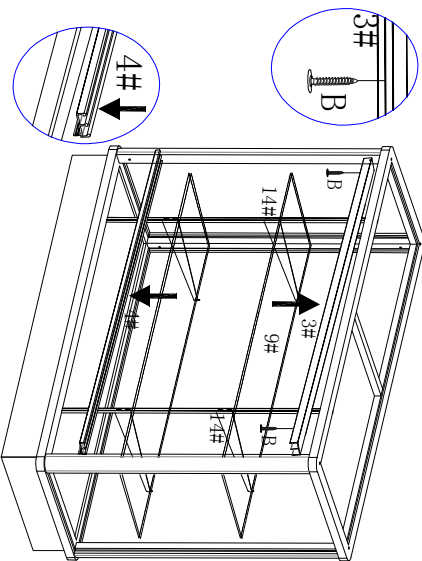


- 




- 1# 1pc
5# 2pcs
6# 2pcs
A 4pcs
F 4pcs


Step 1

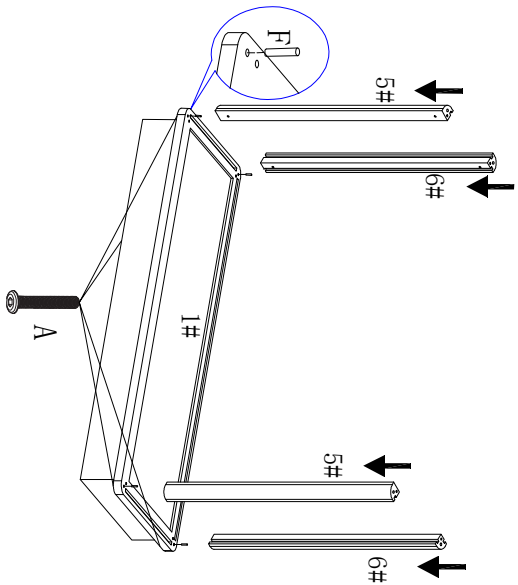

- 


- 2# 1pc
A 4pcs
F 4pcs


Step 3

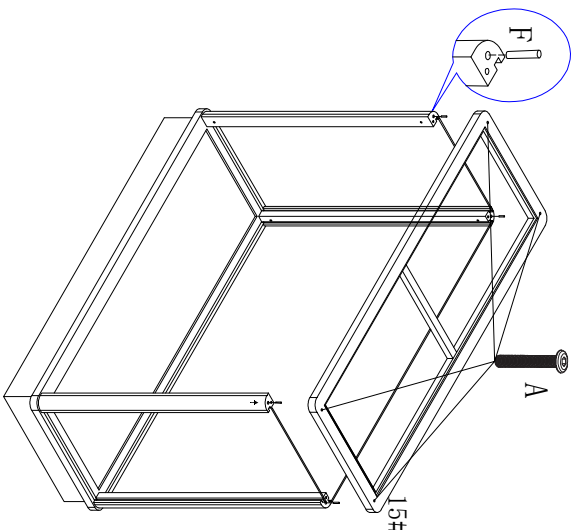

- 

- 11# 2pcs
8# 1pc

Step 2



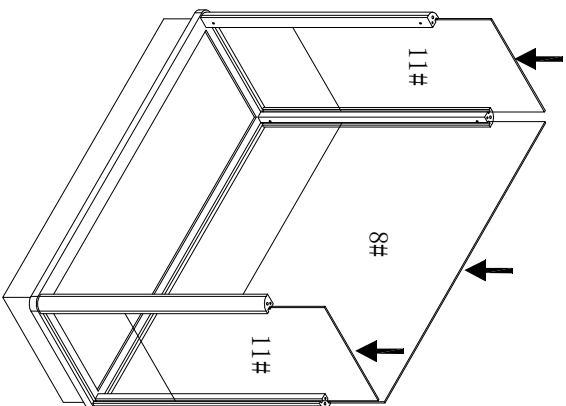



- 


- L: 827mm
16# 2pcs
19# 1pc
B 4pcs
C 2pcs


Step 4

Please insert the rubber strip into the gap between the glass and the wood.

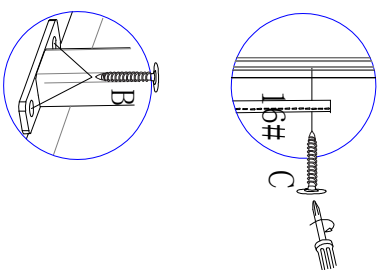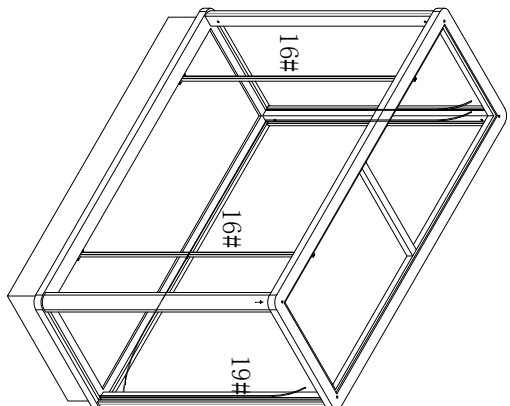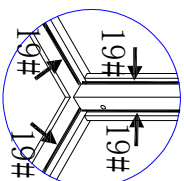


-  12# 1pc
-  E 1pc
-  G 2pcs
-  H 1pc

Step 9

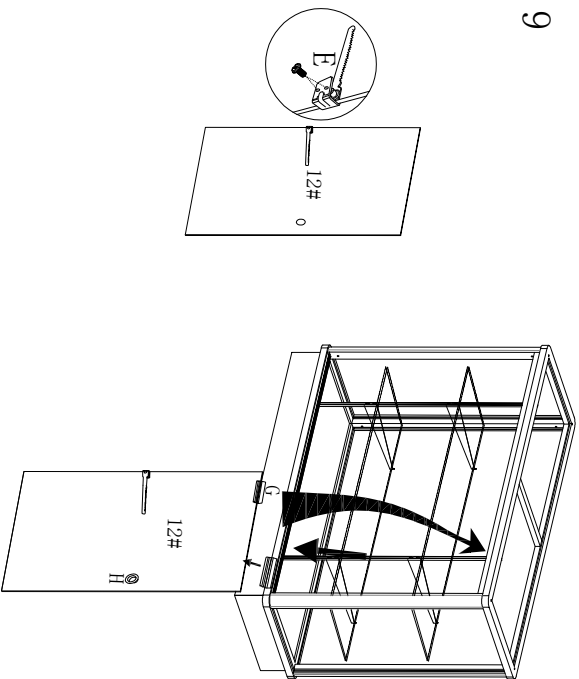

-  12# 1pc
-  G 2pcs
-  H 1pc

Step 10

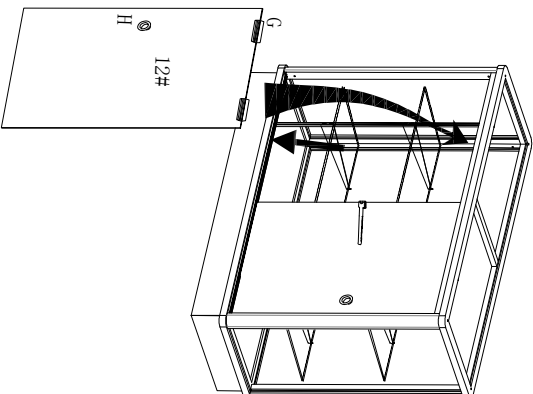

WRGS4 SHOWCASE
ASSEMBLY INSTRUCTION

