
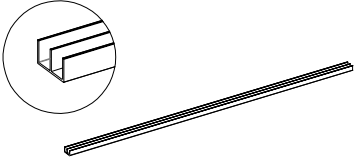
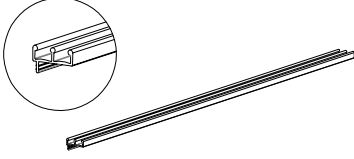
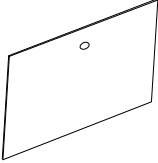
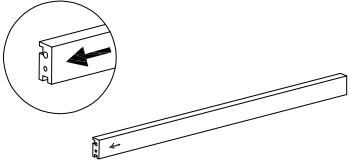
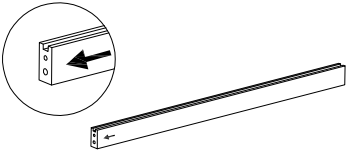
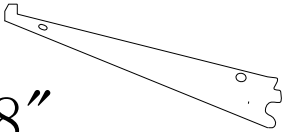

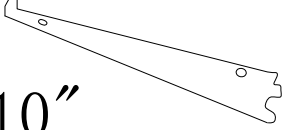




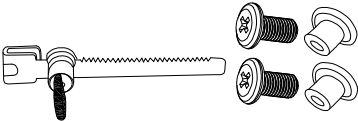


WGS4					
Assembly Instruction					
S/N	PIC	QTY	S/N	PIC	QTY
1#		1	9# GLASS	 1120×203MM	1
2#		1	10# GLASS	 1120×254MM	1
3# AL		2	11# GLASS	 814×350MM	2
4# AL		1	12#		2
5#		2	13# Felt Strip		1
6#		2	14#	 8"	2
7# GLASS	 1143×377MM	1	15#	 10"	2
8# GLASS	 1162×814MM	1	16#	 L:827MM	2


parts list

S/N	PIC	QTY	S/N	PIC	QTY
19# Felt Strip		1	G		4
A	 M6 × 50MM	8	H Door handle		2
B	 M4 × 13MM	6			
C	 M4 × 19MM	2			
D		1			
E		1			
F	$\varnothing$ 8 × 40MM 	8			

NOTE:

Please make sure that all parts above are fixed tightly before use.
This product is for indoor use only.
It is recommended that two persons assemble this unit.
Extra screws for spare using.

TOOLS REQUIRED

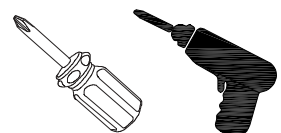


- 1143×377MM

7# 1pc

13# 1pc

Step 5

Cut off the felt strip
 according to the required
 size. Peel off the surface
 film and stick them
 in the corresponding
 position.


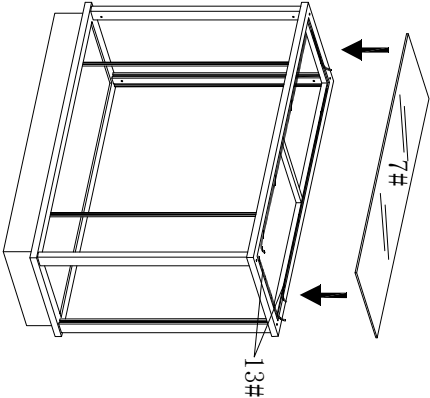


- 1120×254MM

10# 1pc

15# 2pcs

Step 6

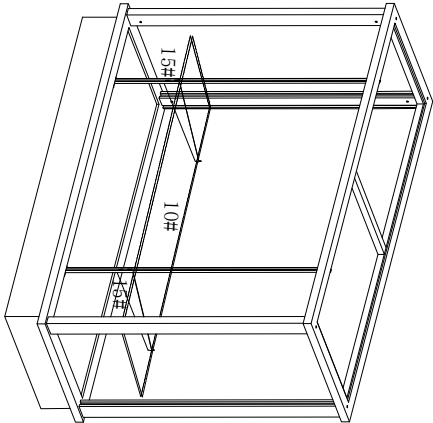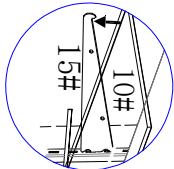


- 1120×203MM

9# 1pc

14# 2pcs

Step 7

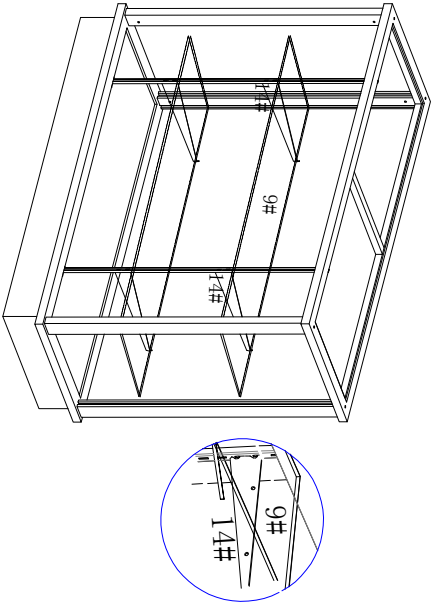


- 3# 1pc

4# 1pc

M4×13

B 2pcs

Step 8

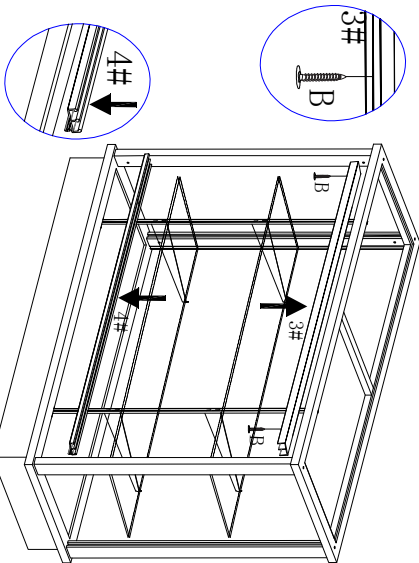








1# 1pc


5# 2pcs

6# 2pcs

A 4pcs

F 4pcs

Step 1

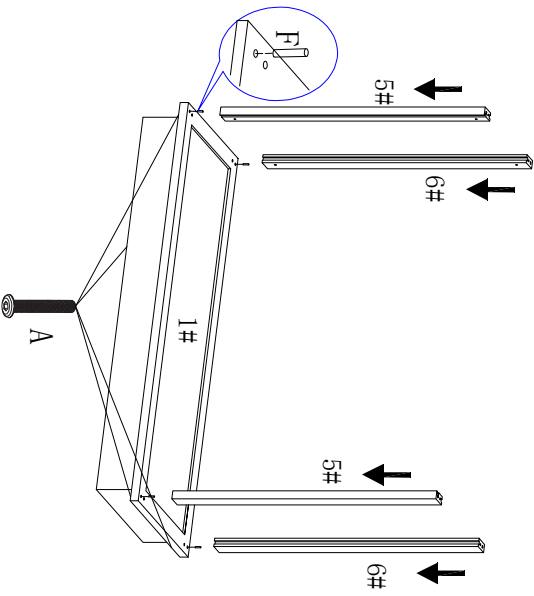





11# 2pcs

8# 1pc

Step 2

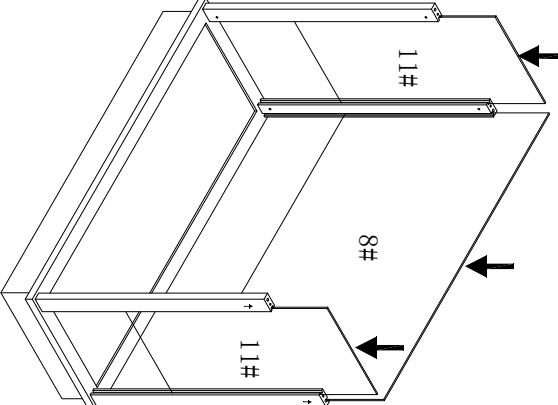






2# 1pc

A 4pcs

F 4pcs

Step 3

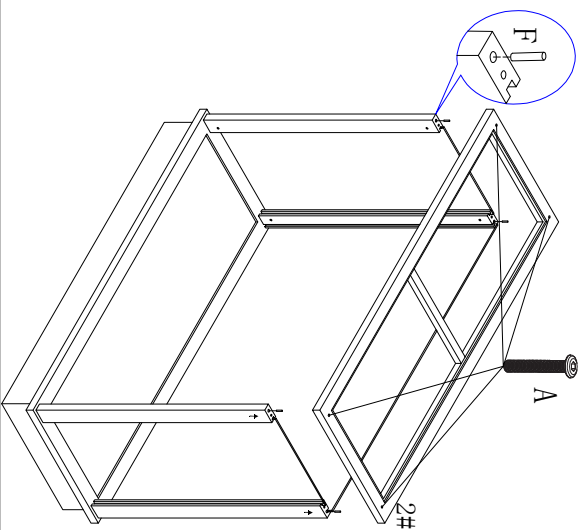





16# 2pcs


19# 1pc


B 4pcs

C 2pcs

Step 4

Please insert the rubber strip into the gap between the glass and the wood.

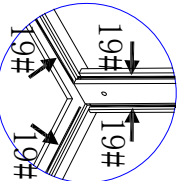

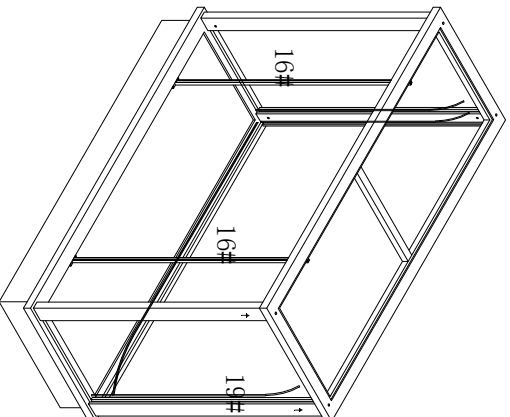

12# 1pc E 1pc G 2pcs H 1pc	12# 1pc G 2pcs H 1pc
Step 9	Step 10
WGS4 SHOWCASE ASSEMBLY INSTRUCTION	