

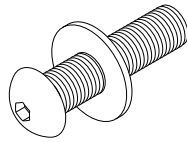



Parts Included:

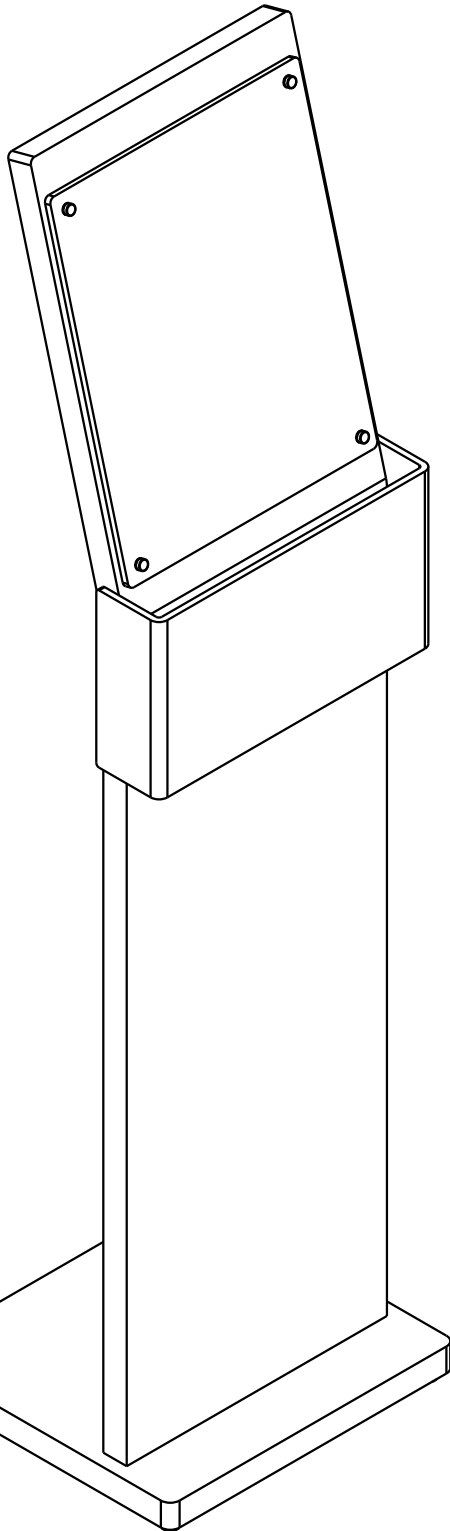


M6*25 Screws



Allen key

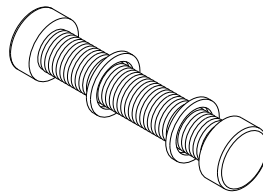



Sign Screw

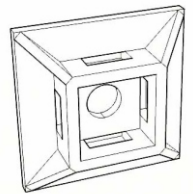


Zip Tie Mount




Zip Tie

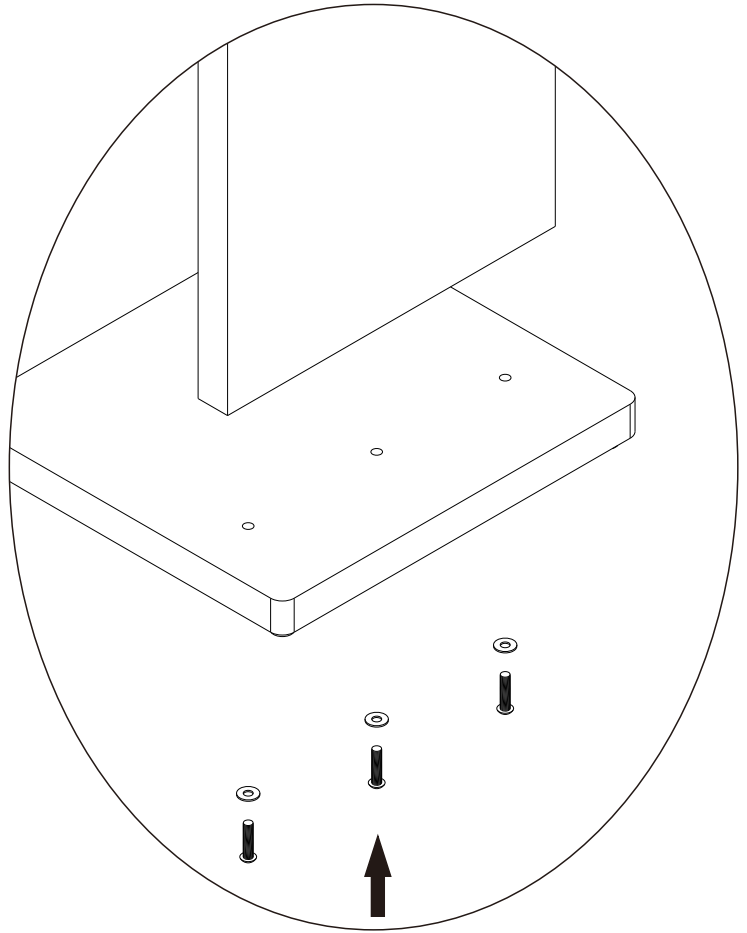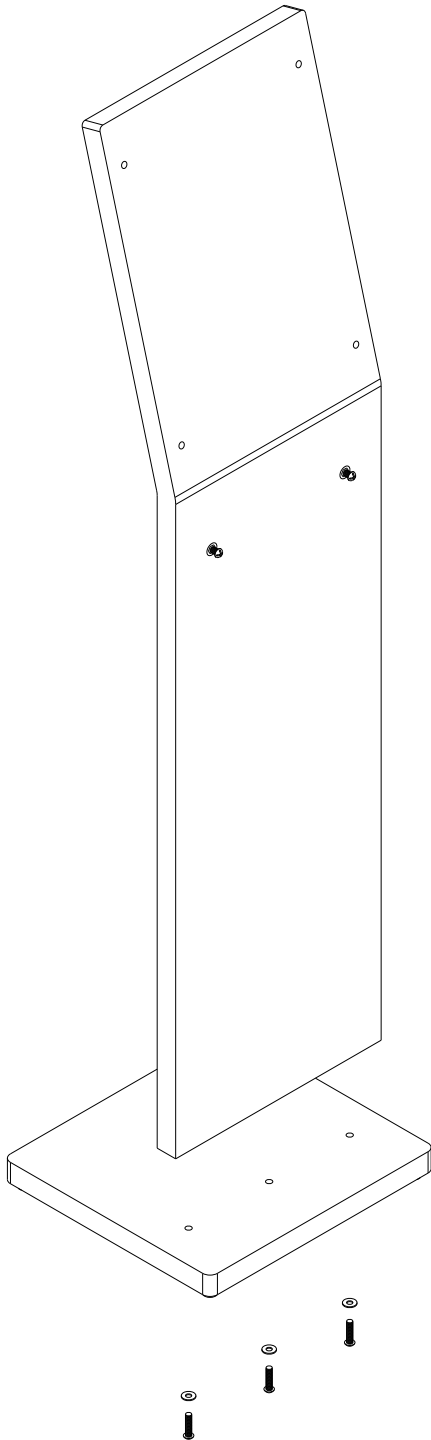


Fix the base with M6*25 screws using an Allen key.

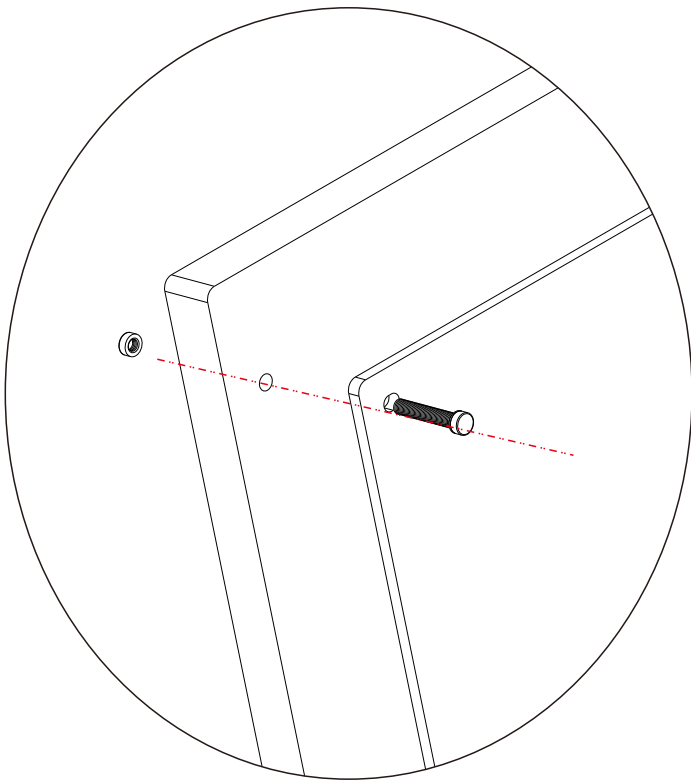

Mount the acrylic panel
with sign screws.

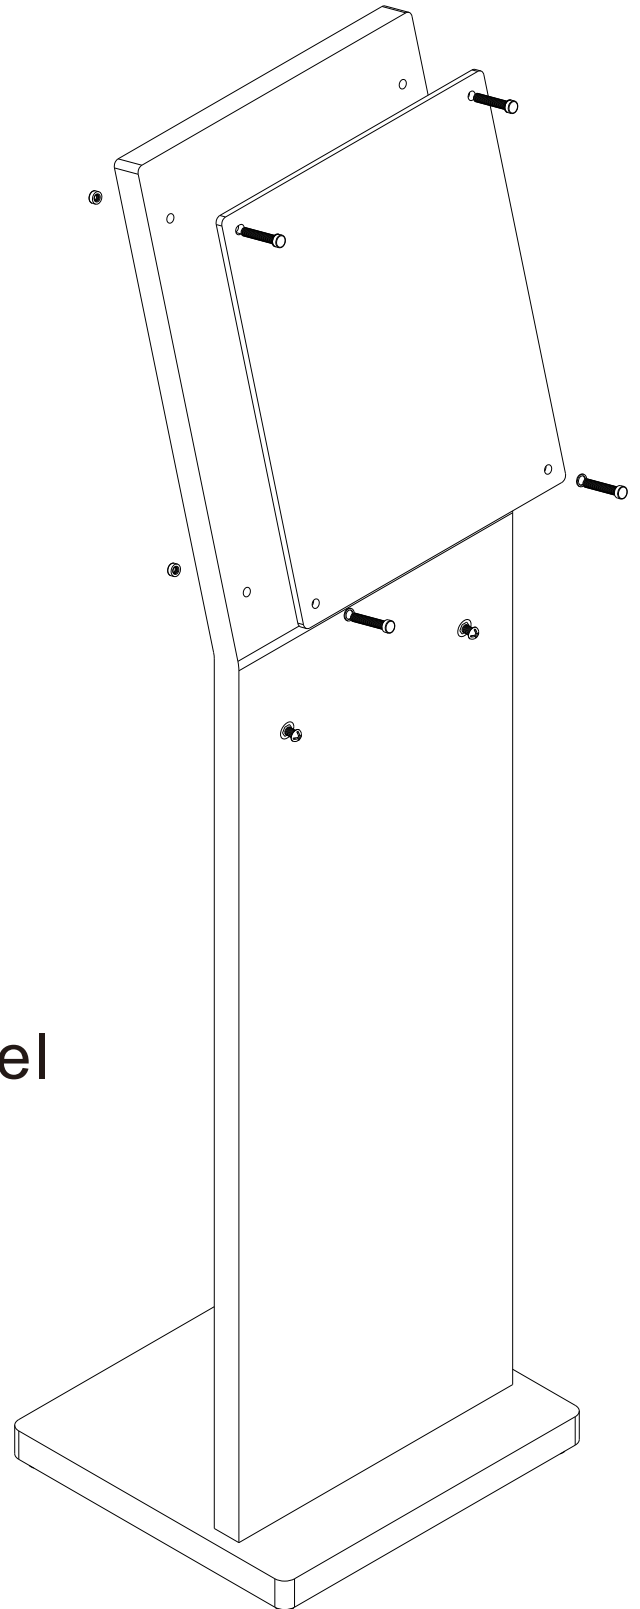

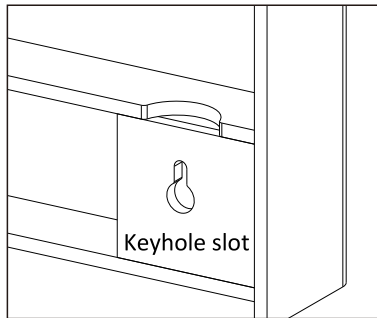

Install Charging Pocket on TLH by aligning the keyhole slots on the Charging Pocket with the Phillips head screws installed earlier and push down to secure.

Use zip tie mounts and zip ties to route Power Cord around/down TLH as desired.

