
Floor Standing Sneeze Guard Divider


ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

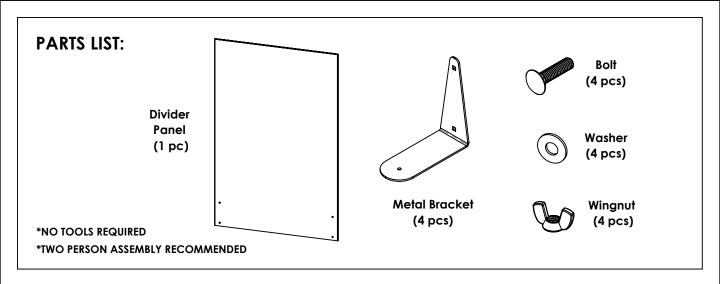


STEP 1: Peel off the protective plastic film from both sides of Divider Panel.

STEP 2: Stand Divider Panel upright on flat surface, making sure the pre-drilled holes are closest to the floor. While one person holds the Divider Panel up, have the other person attach the first set of Metal Brackets to base of Panel.

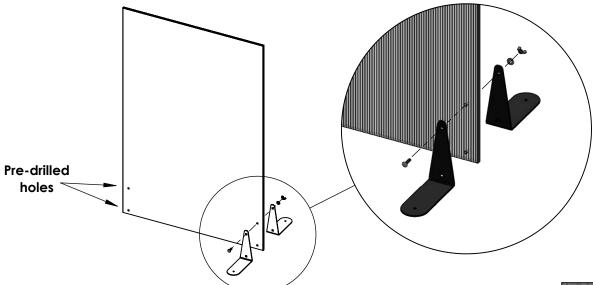

Insert bolt through top square hole in Metal Bracket and align with corresponding top hole in base of Divider Panel.

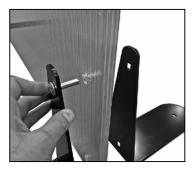

Feed bolt through hole in Panel and then through top square hole in second Metal Bracket on the other side



Add washer and fully tighten with wingnut. Repeat these steps for bottom hole.



Floor Standing Sneeze Guard Divider


ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.


STEP 3: Repeat STEP 2 to install remaining two metal brackets on opposite side of Floor Divider.

ASSEMBLY COMPLETED

NOTE: Additional holes in Metal Brackets offer you the option to anchor your Divider to the floor, with use of appropriate hardware (not included).

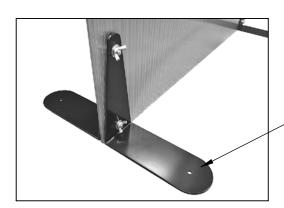

Use additional holes to mount Divider to floor

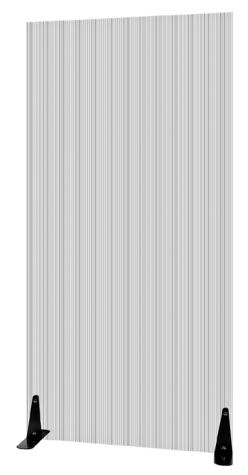

13801 / 13802 / 13803