


Economy Countertop Sneeze Guard


ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

PARTS LIST:

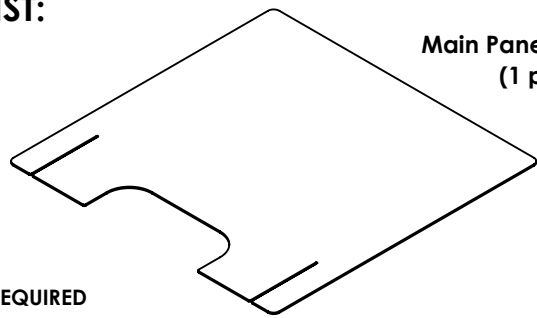

Main Panel Upright
(1 pc)

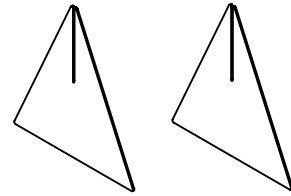


Side Panel Upright (2 pcs)


*NO TOOLS REQUIRED

STEP 1: Peel off the protective plastic film from both sides of Main Panel Upright & Side Panel Uprights.

STEP 2: Place the Main Panel Upright on its side & align one of its side slots with the slot on one of the Side Panel Uprights.

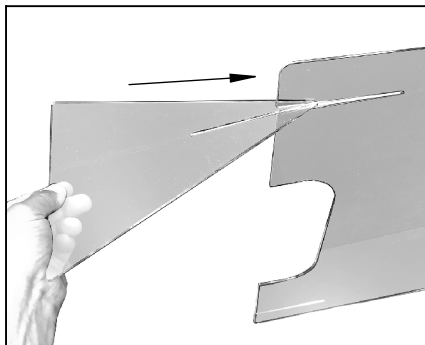


STEP 3: Slide the Side Panel Upright into the Main Panel Upright until it stops. The bottom edge of the Main Panel Upright & the Side Panel Upright will be flush with each other.

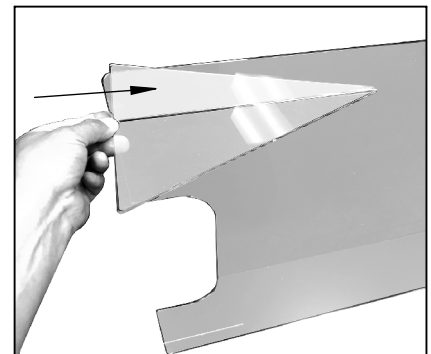


STEP 4: Repeat STEP 3 to install the other Side Panel Upright into remaining slot on Main Panel Upright, again ensuring that the bottom edge of the Side Panel Upright is flush with the bottom of the Main Panel Upright.

STEP 5: Turn the shield upright so that the bottom edges of the Main Panel Upright and Side Panel Uprights are sitting flush with the surface you are placing the shield on.

ASSEMBLY COMPLETED

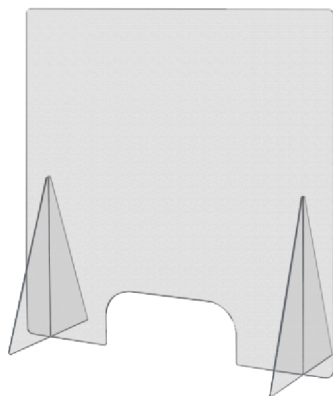

13401 / 13401-PC / 13402 / 13402-PC /
13403 / 13404

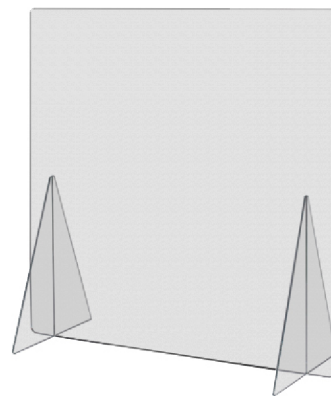

13425 / 13425-PC / 13426 / 13426-PC /
13427 / 13427-PC