
## Urinal Divider with Dual Lock

## ASSEMBLY INSTRUCTIONS


READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

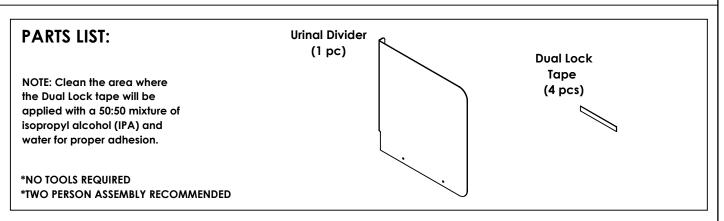

**STEP 1:** Peel off the protective plastic film from both sides of Urinal Divider.

**STEP 2:** Remove the 3M protective film mask from one Dual Lock tape strip and apply the adhesive side facing inward vertically to the flange.

Dual Lock tape strip should be centered between holes.

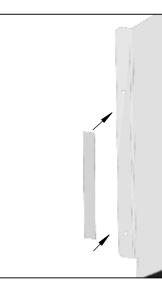


**STEP 3:** Attach one Dual Lock tape strip to the Dual Lock tape strip on the flange of the Urinal Divider with the adhesive side facing outward.

Do not remove 3M protective film yet.




**STEP 4:** Remove the 3M protective film mask from one Dual Lock tape strip and apply the adhesive side facing inward horizontally to the inside of the Urinal Divider.

Dual Lock tape strip should be centered between holes.

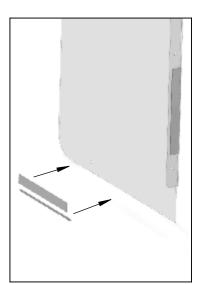

**STEP 5:** Attach one Dual Lock tape strip to the Dual Lock tape strip on the inside of the Urinal Divider with the adhesive side facing outward.

Do not remove 3M protective film yet.

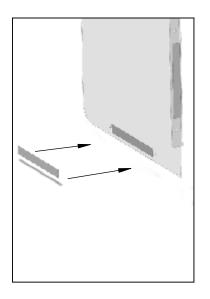


shopPOPdisplays makes no claim that these assembly instructions cover all details, conditions or variations, or that they cover all possible contingencies in connection with the assembly or installation of this product. It is the Purchaser's responsibility to ensure that all components of this product are properly assembled and installed in accordance with these instructions. shopPOPdisplays assumes no obligation or liability on account of any third-party recommendations, opinions or advice as to the assembly or installation of this product.

## Urinal Divider with Dual Lock


ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

**STEP 6:** Remove the 3M protective film mask from the Dual Lock tape strips. Place Urinal Divider over two desired surfaces. Press firmly over the flange & outside face and hold for 30 seconds to bond the adhesive side of the Dual Lock tape strips to the desired surfaces.

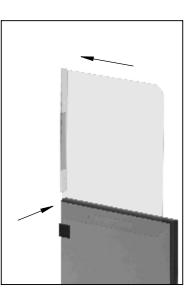


**STEP 7:** Assembly is now completed. You can remove and reattach as needed. Two Dual Lock strips will stay on the desired surfaces and the other two on the Urinal Divider.

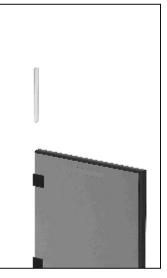

**STEP 8:** When reattaching make sure the Dual Lock tape strips are firmly attached to each other.

## ASSEMBLY COMPLETED

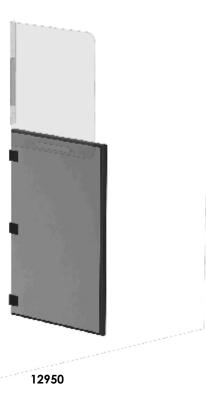

shopPOPdisplays makes no claim that these assembly instructions cover all details, conditions or variations, or that they cover all possible contingencies in connection with the assembly or installation of this product. It is the Purchaser's responsibility to ensure that all components of this product are properly assembled and installed in accordance with these instructions. shopPOPdisplays assumes no obligation or liability on account of any third-party recommendations, opinions or advice as to the assembly or installation of this product.