

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

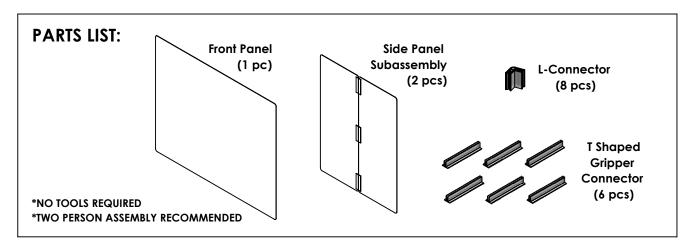


STEP 1: Peel off the protective plastic film from Front Panel and Side Panel subassemblies.


**STEP 2:** Stand up Front Panel and push one of the L-connectors onto a side edge of Panel at top, just under rounded corner.

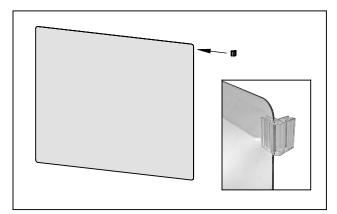


**STEP 4:** Add two additional L-connectors to side edge of Front Panel, evenly spaced out between installed L-connectors (~ 8" apart).

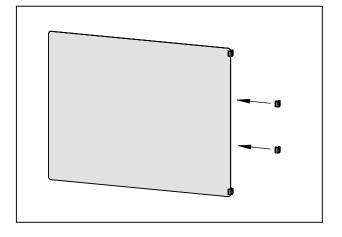

**STEP 3:** Take another L-connector and push onto the side edge of Panel at bottom, just above rounded corner.

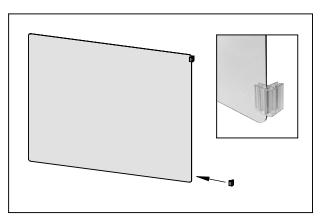


**STEP 5:** Repeat STEPS 2 - 4 to install remaining four L-connectors on opposite side edge of Front Panel.

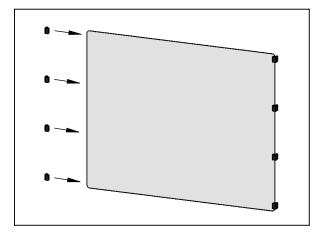



**STEP 6:** Take one of the Side Panel subassemblies and attach it to one side of the Front Panel by pushing into installed L-connectors on Front Panel.

NOTE: Top edges of Front Panel and Side Panels should be flush with each other.

**STEP 7:** Attach remaining Side Panel subassembly to other side of Front Panel, again by pushing into installed L-connectors on Front Panel.

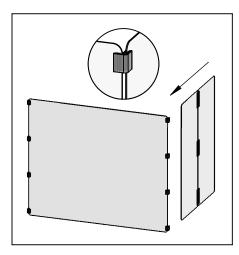

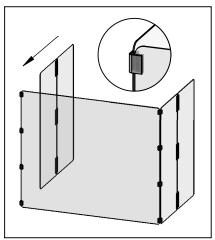


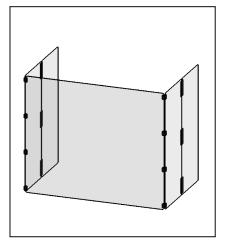


**STEP 8:** Use the adhesive-backed T Shaped Gripper Connectors (included) to attach barrier securely to desktop. Install one in the middle of the bottom edge of each Side Panel and two additional ones evenly spaced on the bottom edge of the Front Panel.

NOIE: To ensure proper adhesion of I Grippers to mounting surface, clean the area where the tape will be applied and make sure it is dry prior to mounting Shield.



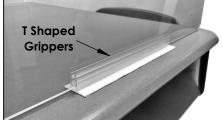

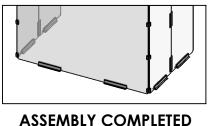

ASSEMBLY COMPLETED

NOTE: Flexible connectors on rear Side Panels allow for multiple set-up options of your Desk Shield. Adjust the angle of the hinge joints to accomodate the shape of your workspace.

