


Economy Floor Standing PVC Clear Vinyl Barrier

ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.


PARTS LIST:

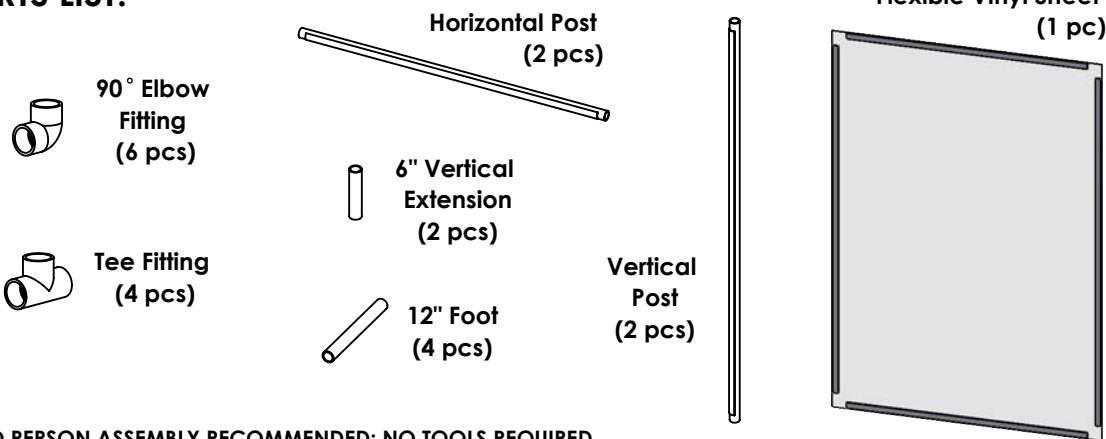

*TWO PERSON ASSEMBLY RECOMMENDED; NO TOOLS REQUIRED

See below diagram as reference during assembly of your Floor Standing Barrier:

PART	NAME	QTY.
1	Vertical Post	2
2	Horizontal Post	2
3	Flexible Vinyl Sheet	1
4	90° Elbow Fitting	6
5	Tee Fitting	4
6	6\" Vertical Extension	2
7	12\" Foot	4

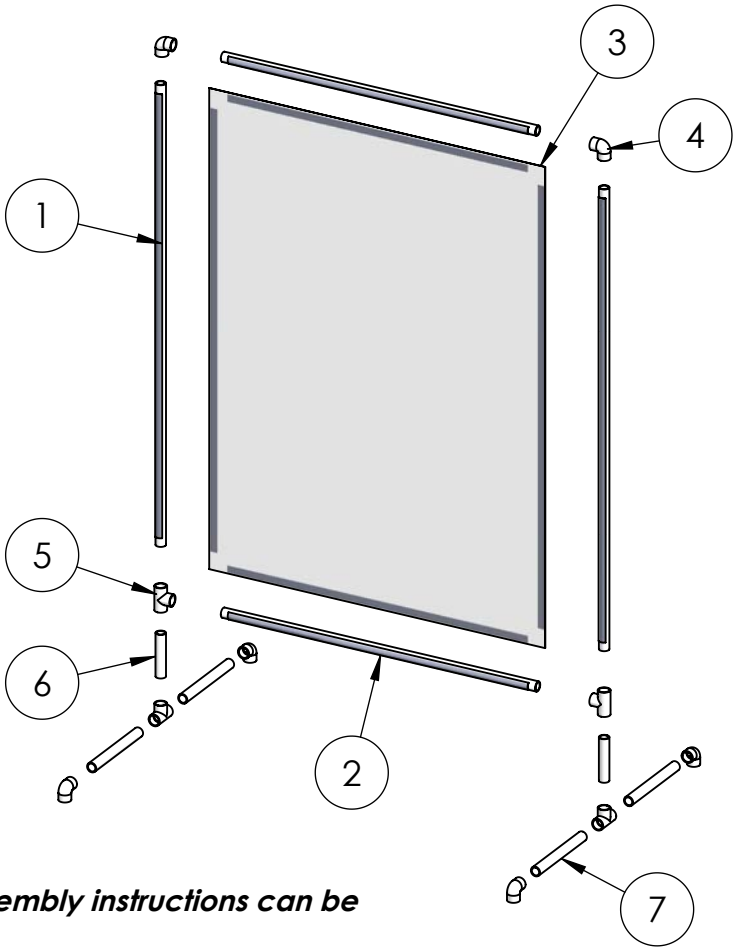


*****More detailed images and assembly instructions can be found on the following pages.***

Economy Floor Standing PVC Clear Vinyl Barrier

page 2 of 4


ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.


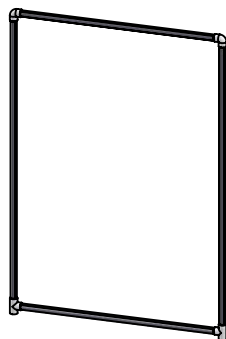


MAIN FRAME SUBASSEMBLY:



STEP 1: Take two of the 90° Elbow Fittings and connect them to the open ends of a Horizontal Post as shown below. **NOTE: The Hook and Loop fastener installed on the Horizontal Post should face forward.**

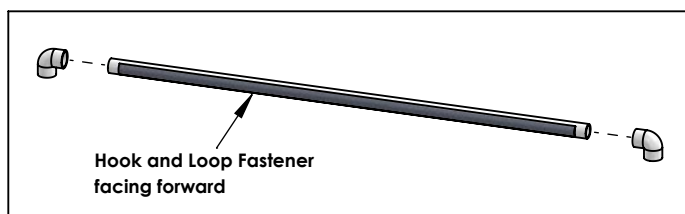


STEP 2: Connect the two Vertical Posts into the open ends of the 90° Elbow Connectors, again making sure Hook and Loop fastener that is installed on the Vertical Posts is facing forward.

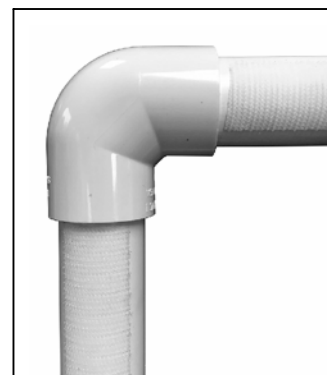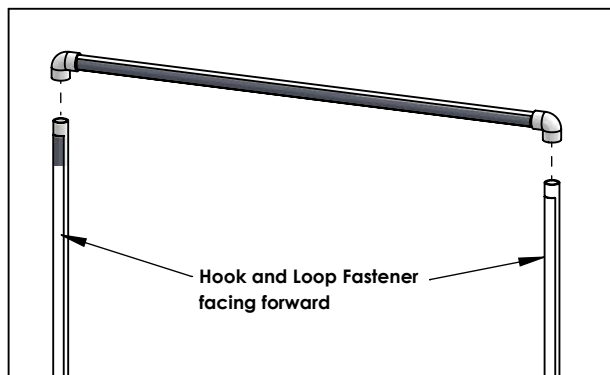



STEP 3: Connect two of the Tee Fittings to bottom ends of Vertical Posts in the orientation shown below. Complete Main Frame subassembly by connecting the remaining Horizontal Post to the inside open ends of Tee Fittings. Place frame subassembly off to side and continue on to Foot subassembly directions.

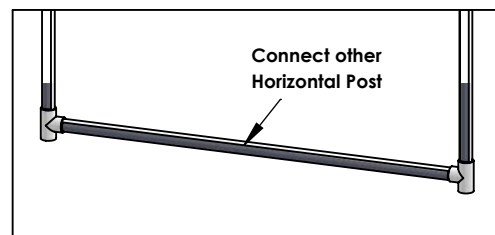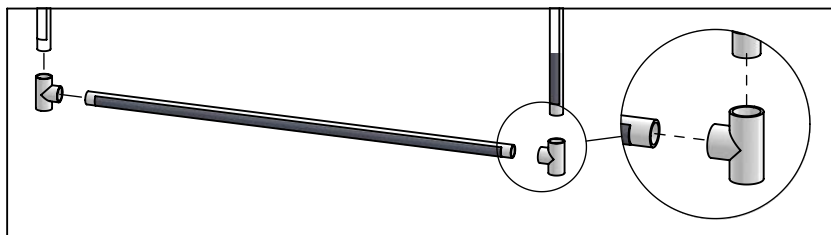

FOOT SUBASSEMBLY:

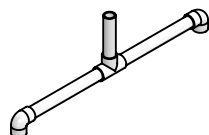

STEP 4: Take one of the 6" Vertical Extensions and insert it into the top hole of a Tee fitting as shown at right.

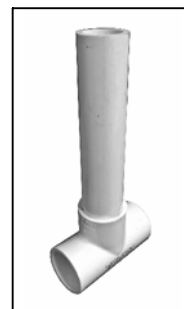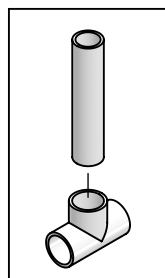

Economy Floor Standing PVC Clear Vinyl Barrier




page 3 of 4

ASSEMBLY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

STEP 5: Insert a 12" Foot into each open end of the Tee fitting.


NOTE: If there is any printing on the PVC pipes, turn pipes downward so printing faces floor.

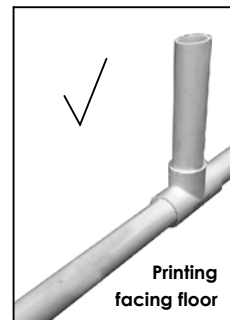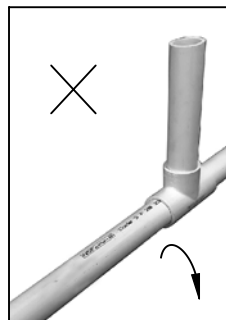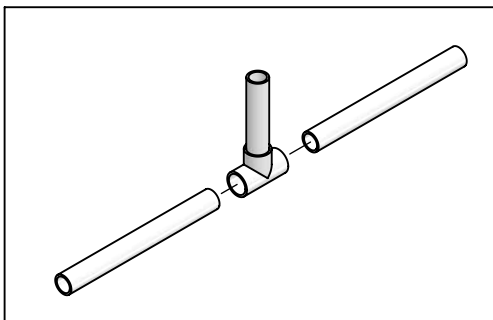

STEP 6: Connect two of the 90° Elbow Fittings to open ends of 12" Feet. Bottom opening of Elbow Fitting should be parallel to floor.

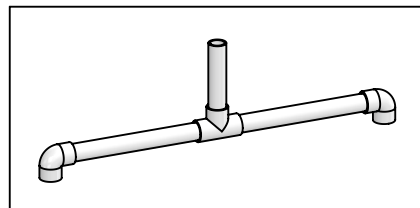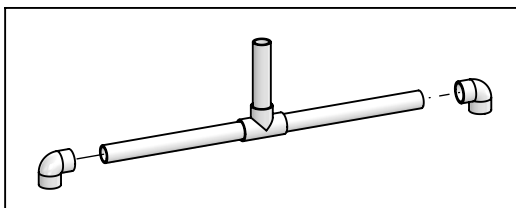


STEP 7: Repeat STEPS 4 - 6 to create a second Foot Subassembly.

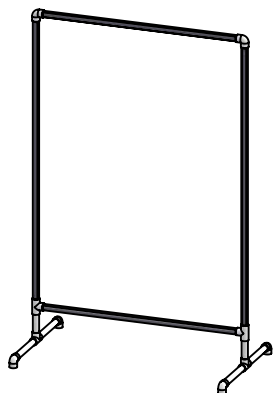


OVERALL FRAME SUBASSEMBLY:


STEP 8: Lay Main Frame Subassembly down on flat surface and connect one of the Foot Subassemblies into open end of Tee fitting at bottom of Main Frame subassembly.

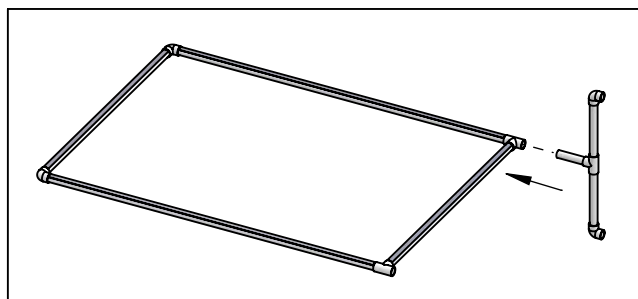

STEP 9: Connect remaining Foot Subassembly into open end of Tee fitting on opposite side of Main Frame Subassembly.

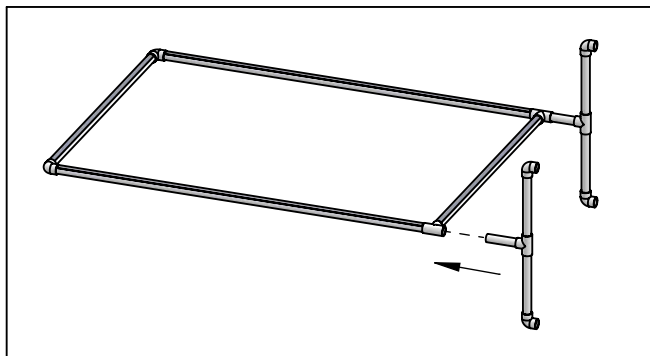

STEP 10: Stand assembled unit upright on flat surface and make sure all connection points fit snugly together.

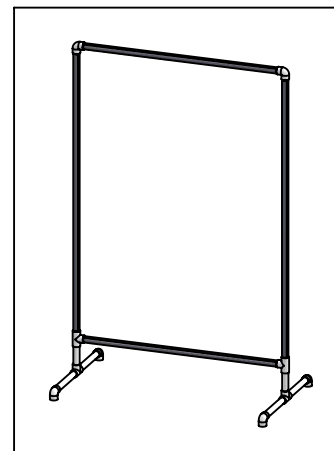

Economy Floor Standing PVC Clear Vinyl Barrier



page 4 of 4

ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

VINYL SHEET INSTALLATION:

STEP 11: Unroll Vinyl Sheet and align Hook and Loop Fastener on Vinyl Sheet with Hook and Loop Fastener installed on Frame. Start at top of frame and work your way down to the bottom, pressing down firmly on fastener strips to ensure proper adhesion of sheet to frame.

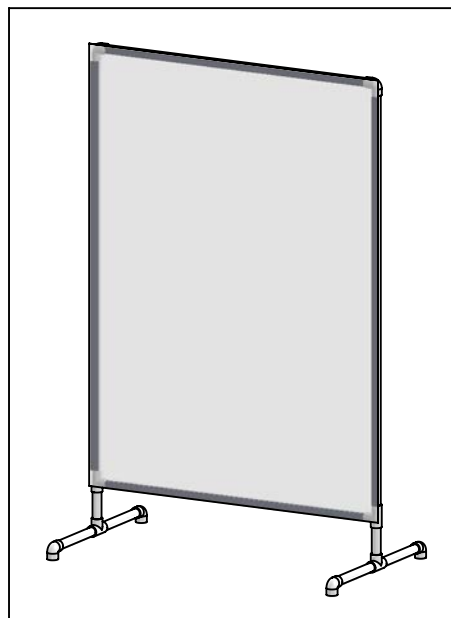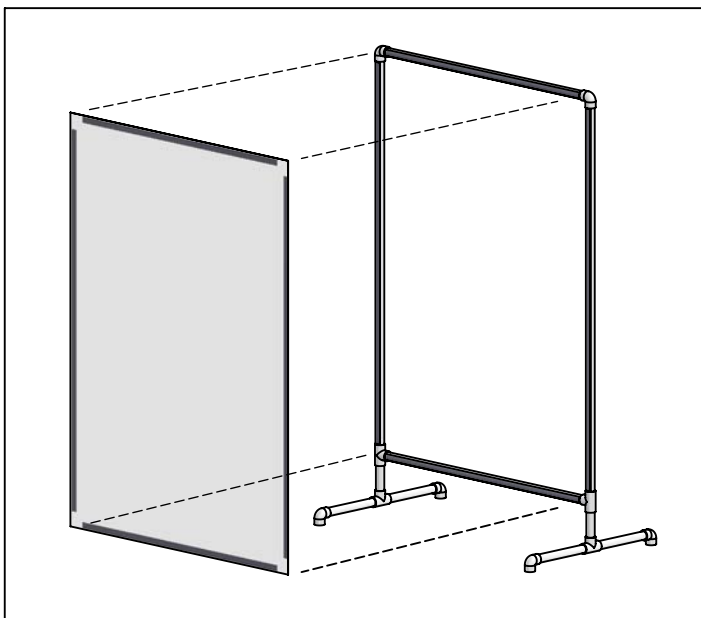

ASSEMBLY COMPLETED



14700