


# Clear Acrylic U Shape Barrier Shield

page 1 of 2


## ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.


### PARTS LIST:



90 Degree  
Connector  
(6 pcs)

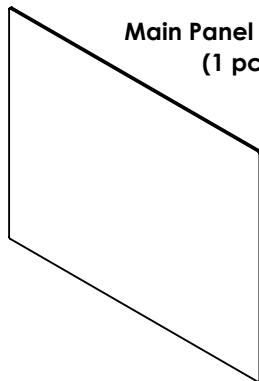

Main Panel Upright  
(1 pc)

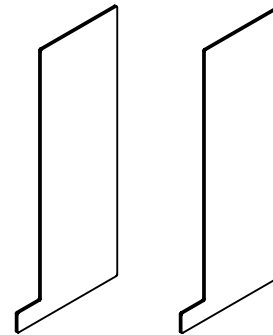


Side Panel Upright (2 pcs)

\*NO TOOLS REQUIRED


\*TWO PERSON ASSEMBLY RECOMMENDED

**STEP 1:** Peel off the protective plastic film from both sides of Main Panel Upright & Side Panel Uprights.


**STEP 2:** Stand up one of the Side Panel Uprights and push one of the 90 Degree Connectors onto the front of the Side Panel Upright.

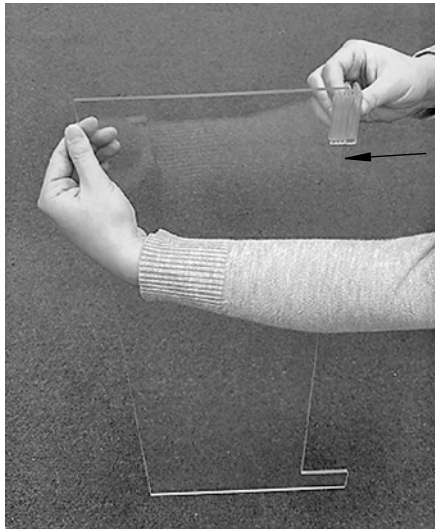

**STEP 3:** Push the two other 90 Degree Connectors onto Side Panel Upright, spacing them out to the desired distance. Make sure all 90 Degree Connectors are facing the same direction.

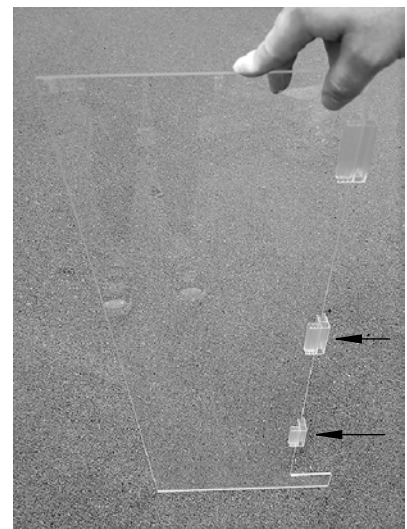

**STEP 4:** Repeat STEPS 2 & 3 for the other Side Panel Upright. The 90 Degree Connectors should face the opposite direction of the other Side Panel Upright.

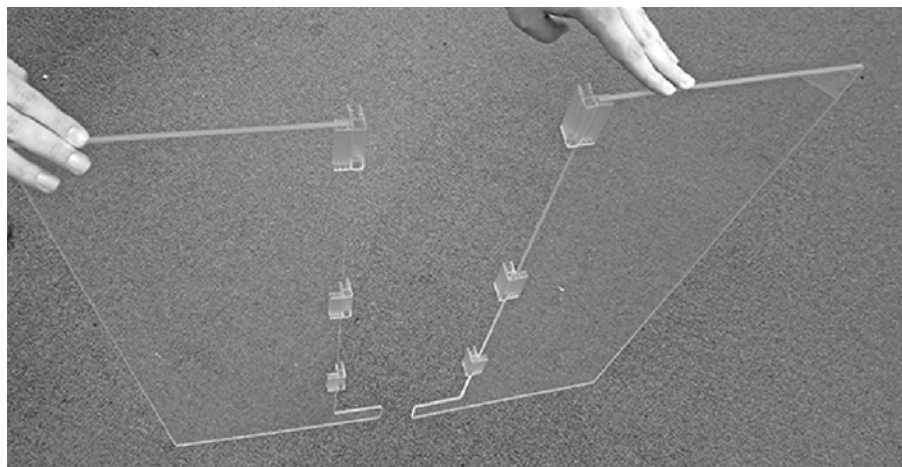




# Clear Acrylic U Shape Barrier Shield

page 2 of 2

## ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.


**STEP 5:** Push the 90 Degree Connectors from one of the assembled Side Panel Uprights onto one of the sides of the Main Panel Upright. Make sure top edges of the Side Panel Upright and Main Panel Upright are flush with each other. Repeat this for the other Side Panel Upright.

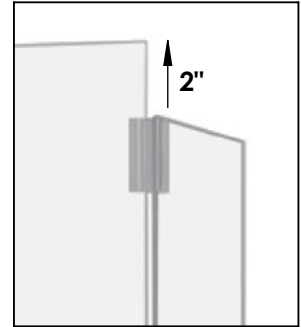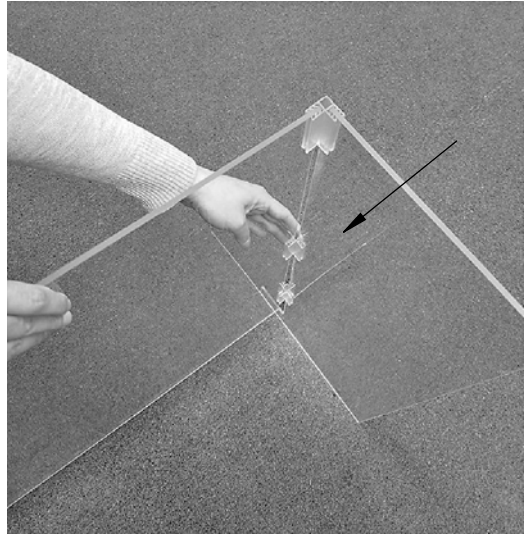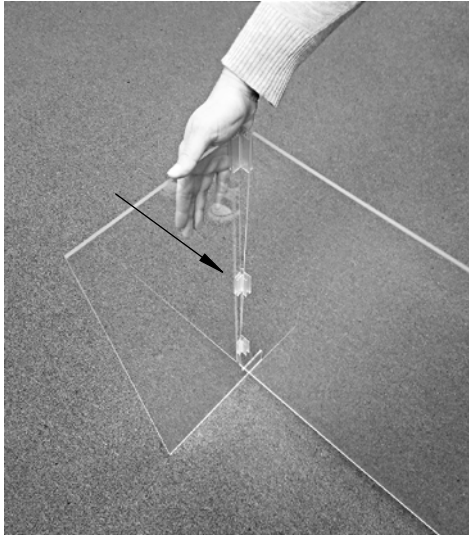

**NOTE:** The Main Panel can also be connected 2" higher than the Side Panels to allow for 6" open space at bottom vs 4" open space at bottom.


**STEP 6:** Make sure all of the 90 Degree Connectors are pushed in and fully engaged with all panels, and the product is rested on a flat surface.

Main Panel shown flush with Sides

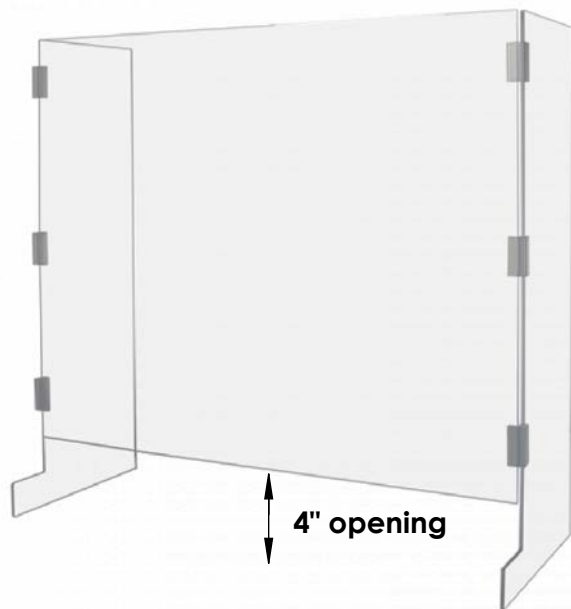

12848 / 12849

Main Panel shown 2" above Sides

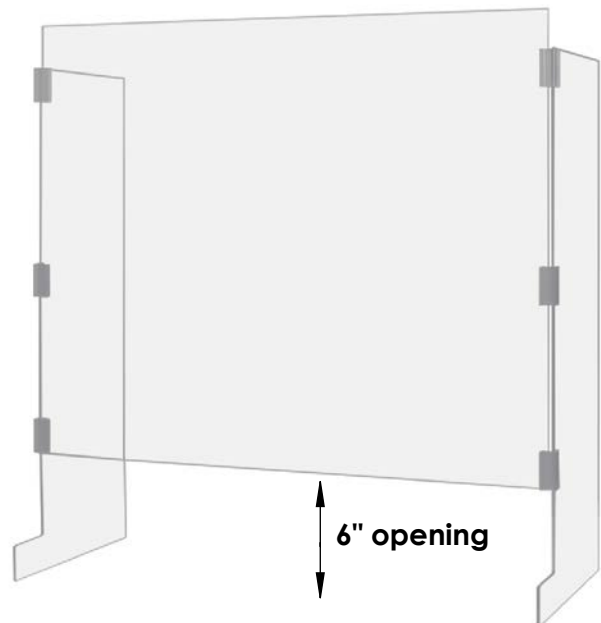

12848-NS

## ASSEMBLY COMPLETED