

Acrylic Solid Panel Table Top Podium

ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

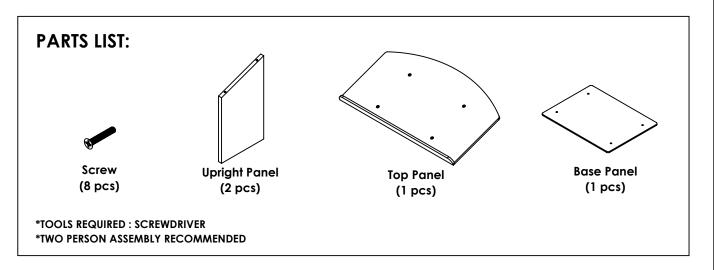

STEP 1: Screw the Base Panel to the Upright Panels as shown below. It is best to lay the unit on its back with the uprights supported in to avoid stress on the screws.

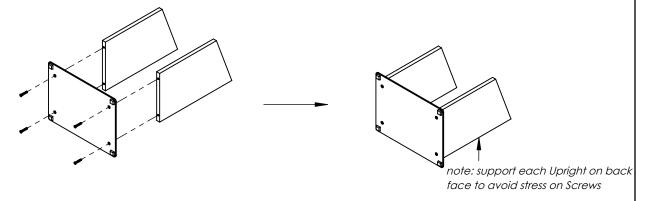

STEP 2: Carefully rotate the unit to sit on its Base Panel. Then, screw the Top Panel to the Uprights as shown below.

