

# Clear Acrylic L Shape Barrier - 17.75"H

## ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

### PARTS LIST:




90 Degree Connector  
(2 pcs)

Main Panel Upright  
(1 pc)



Side Panel Upright  
(1 pc)



INCLUDED WITH  
ITEM 12842 ONLY:




H-Connector  
(1 pc)

\*NO TOOLS REQUIRED


\*TWO PERSON ASSEMBLY RECOMMENDED

**STEP 1:** Peel off the protective plastic film from both sides of Main Panel Upright & Side Panel Upright.


**STEP 2:** Stand up the Side Panel Upright and push one of the 90 Degree Connectors onto the front edge of the Side Panel Upright.

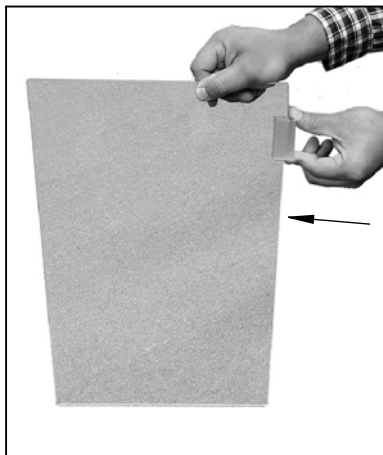

**STEP 3:** Push the other 90 Degree Connector onto the Side Panel Upright, spacing it out to the desired distance. Make sure both 90 Degree Connectors are facing the same direction.

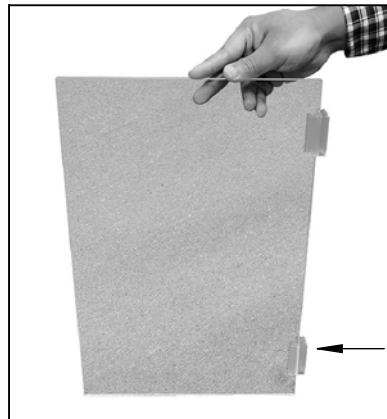

**STEP 4:** Push the 90 Degree Connectors from the assembled Side Panel Upright onto one of the sides of the Main Panel Upright.

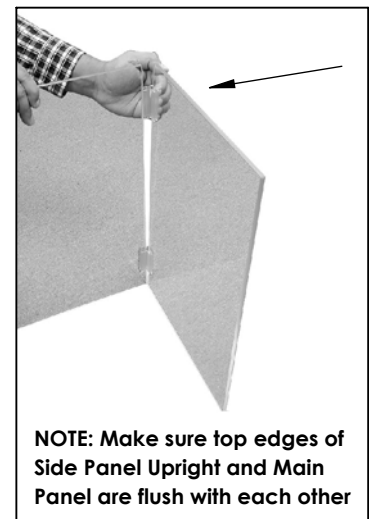


**STEP 5:** Make sure both of the 90 Degree Connectors are pushed in and fully engaged with each of the panels, and the product is rested on a flat surface.

## ASSEMBLY COMPLETED

USE SUPPLIED H-CONNECTOR TO ATTACH OPEN ENDS OF MAIN PANELS TOGETHER



12841

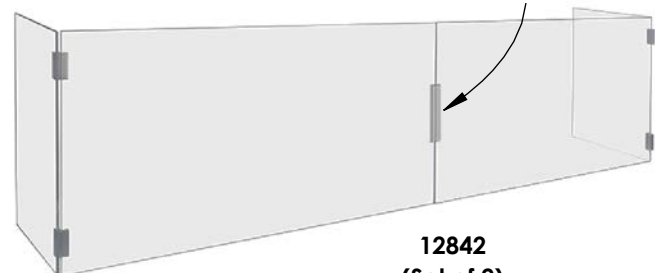

12842  
(Set of 2)

# Clear Acrylic L Shape Barrier - 29.5"H

## ASSEMBLY INSTRUCTIONS


READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

### PARTS LIST:




90 Degree  
Connector  
(3 pcs)


Main Panel  
Upright  
(1 pc)

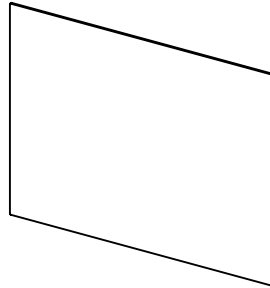

Side Panel  
Upright  
(1 pc)



INCLUDED WITH  
ITEM 12832 ONLY:




H-Connector  
(1 pc)

\*NO TOOLS REQUIRED


\*TWO PERSON ASSEMBLY RECOMMENDED

**STEP 1:** Peel off the protective plastic film from both sides of Main Panel Upright & Side Panel Upright.


**STEP 2:** Stand up the Side Panel Upright and push one of the 90 Degree Connectors onto the front edge of the Side Panel Upright.

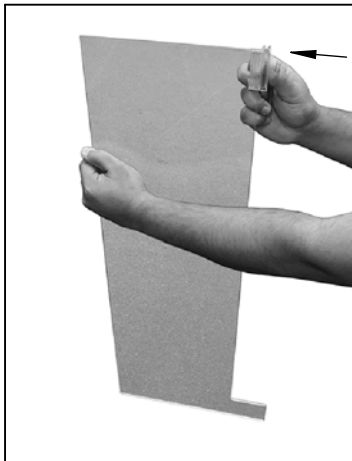

**STEP 3:** Push the other two 90 Degree Connectors onto the Side Panel Upright, spacing them out to the desired distance. Make sure all 90 Degree Connectors are facing the same direction.

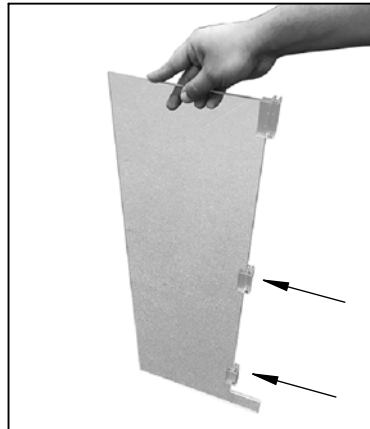


**STEP 4:** Push the 90 Degree Connectors from the assembled Side Panel Upright onto one of the sides of the Main Panel Upright.

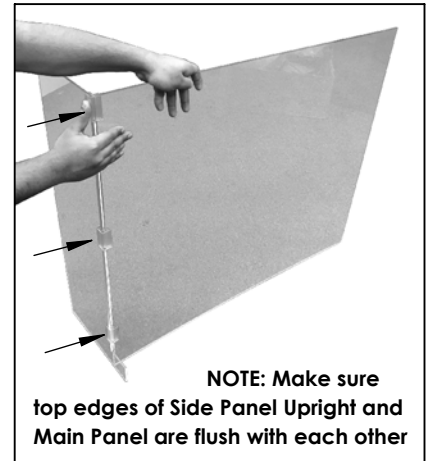


**STEP 5:** Make sure all of the 90 Degree Connectors are pushed in and fully engaged with each of the panels, and the product is rested on a flat surface.

## ASSEMBLY COMPLETED

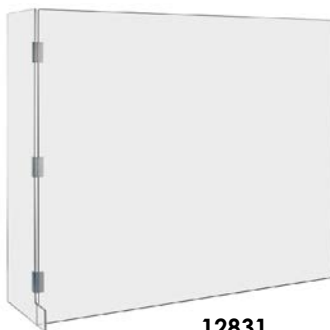

12831

USE SUPPLIED H-CONNECTOR TO  
ATTACH OPEN ENDS OF MAIN  
PANELS TOGETHER

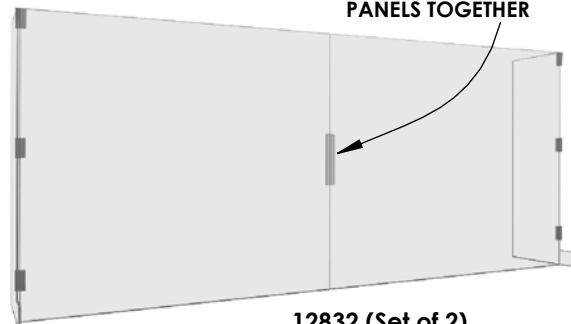

12832 (Set of 2)