


# Flat-Packed Display Unit w/ Base


## ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. PLEASE FOLLOW THE STEPS IN ORDER.


### PARTS LIST



1x Foam PVC Base Panel

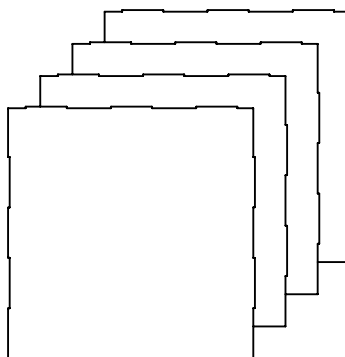

2x FRONT/BACK PANELS  
2x SIDE PANELS  
(ACRYLIC)\*

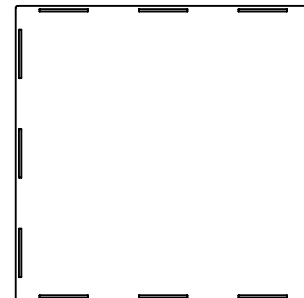

1x ACRYLIC TOP PANEL

Front and back panels come in a set and will be the same size. Side panels come in a set and will be the same size.


\*If Length(L) = Width(W), the front/back **and** side panels will be the **same**

***The assembly instructions are universal across all sizes.***

NOTE: Minimum 2-person assembly required for sizes larger than 18" in any direction. 3-person assembly recommended for sizes larger than 36" in any direction.

**STEP 1:** Peel off protective plastic film from both sides of all the acrylic panels.

**STEP 2:** Identify the key features of the front/back and side panels as shown below. Each front, back and side panels will have one edge with 3 side edge tabs and one edge with 2 side edge tabs. Top edge tabs may vary based on overall size of unit. (Color coded only for reference)

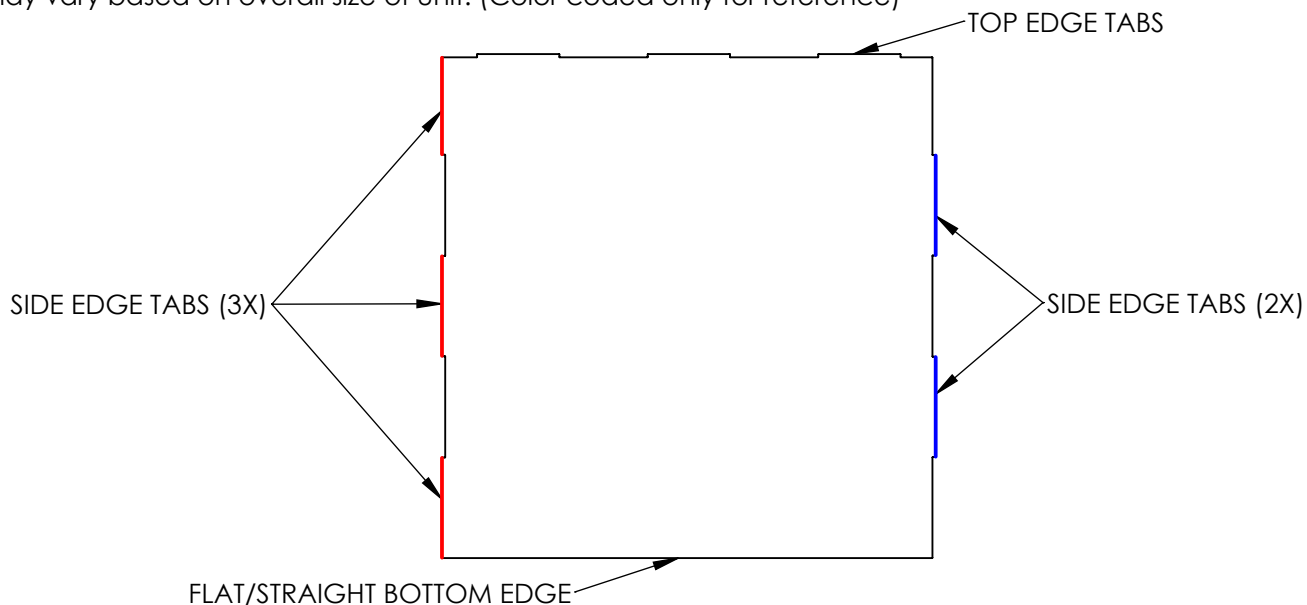

# Flat-Packed Display Unit w/ Base



## ASSEMBLY INSTRUCTIONS

**READ ALL INSTRUCTIONS BEFORE YOU BEGIN. PLEASE FOLLOW THE STEPS IN ORDER.**

*Note: Assemble at the desired location of the display unit to avoid relocation once assembly is complete.*

- STEP 3:** Place the foam PVC base panel on a flat surface with the cutout slot facing up.
- STEP 4:** Place the display object onto the base panel (for display boxes). Or place object after Step 9 (for display pedestals).
- STEP 5:** Insert 1x front panel into the cutout slot of the base. *Always insert the flat/straight edge into the base.*  
*\*See image below for details.*
- STEP 6:** Insert 1x side panel, adjacent to the front panel inserted earlier.
- STEP 7:** Repeat Step 4 and Step 5 to insert the remaining back panel and the side panel.
- STEP 8:** Once the panels are erect, cover the unit with the top panel. The top panel will lay flat once the top edge tabs align into the slots of the top panel.
- STEP 9:** Finally, inspect the assembly and ensure all the side edge tabs are engaged and top edge tabs are inserted into the top panel slots.

*See illustrations below for reference.*

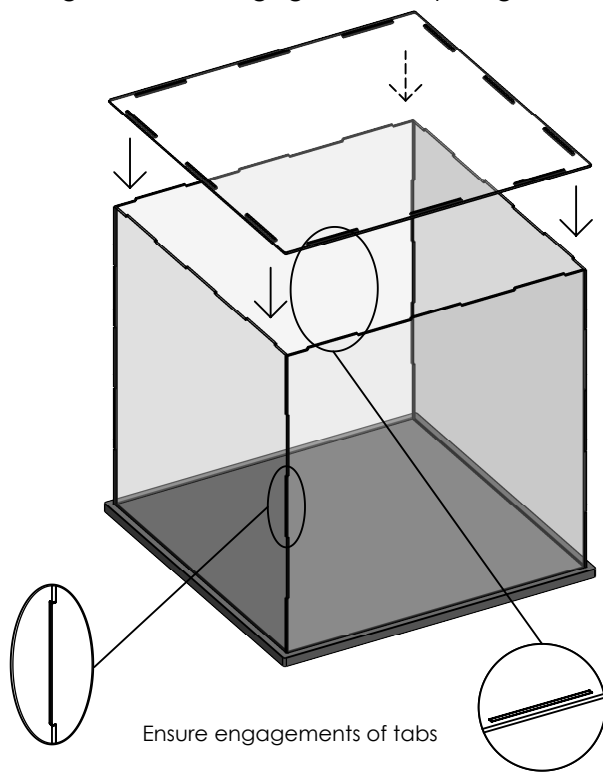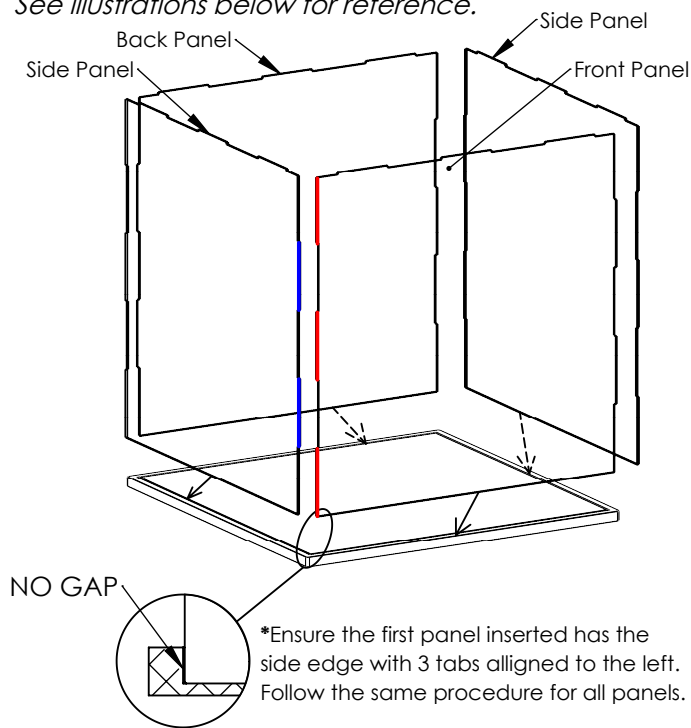

### Various Display Units Shown For Reference

