

# Luxury Floor Standing Barrier

page 1 of 2

## ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

### PARTS LIST:

Washer  
(3 pcs)

Pan Head  
Screw  
(3 pcs)

Divider Panel  
(1 pc)

Metal  
Upright  
(1 pc)

Leg Cross Brace  
(1 pc)


Leg Brace  
(1 pc)

Flat Head Screw  
(1 pc)


\*TWO PERSON ASSEMBLY RECOMMENDED

\*TOOLS REQUIRED: PHILLIPS HEAD SCREWDRIVER (NOT INCLUDED)

**STEP 1:** Carefully lay Metal Upright down on flat surface. Align top side of Leg Cross Brace with open end of Upright and insert collar on top of Leg Cross Brace into bottom of Metal Upright.

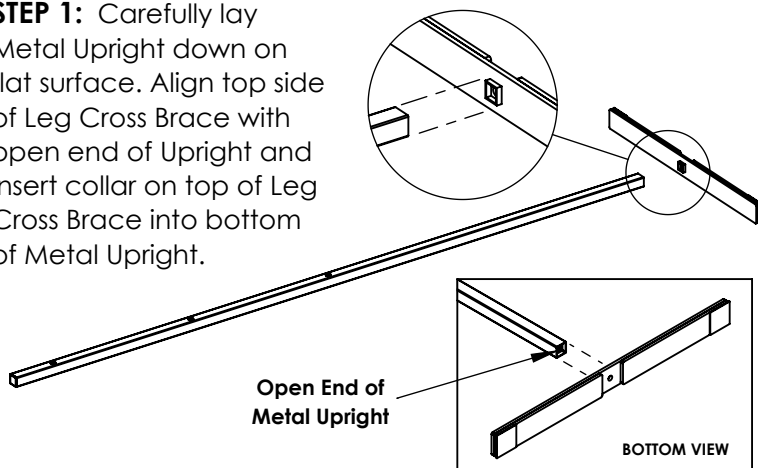


**STEP 2:** Take Leg Brace and fit flush into center opening in Leg Cross Brace, making sure to also line up holes. Leg Brace and Leg Cross Brace will be perpendicular to each other.

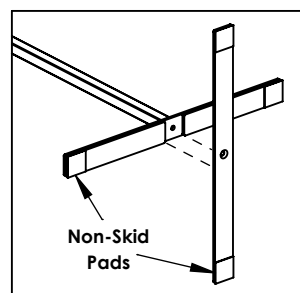


*NOTE: Countersunk Hole on bottom of Leg Brace should be facing out*



CORRECT ORIENTATION

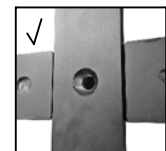

INCORRECT ORIENTATION

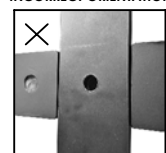

**STEP 3:** While one person holds the two Legs together, have the other person insert the Flat Head Screw through countersunk hole in bottom of Leg Brace. Use screwdriver to tighten Legs fully to Metal Upright.

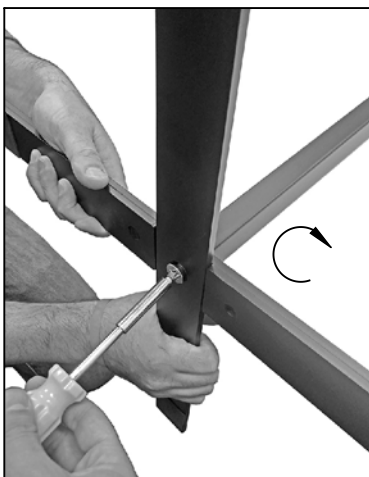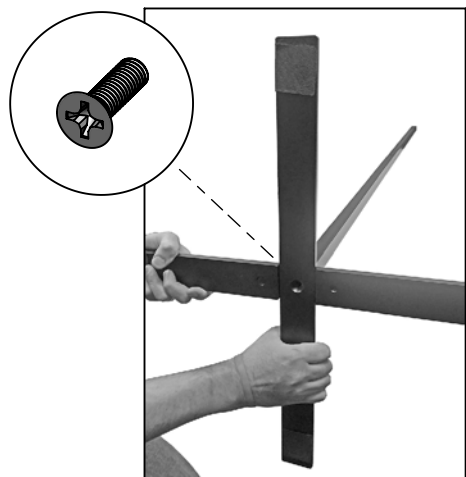

# Luxury Floor Standing Barrier


page 2 of 2

## ASSEMBLY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.



### STEP 4:

Stand up assembled Metal support and Cross Brace so that Legs are sitting on flat surface.

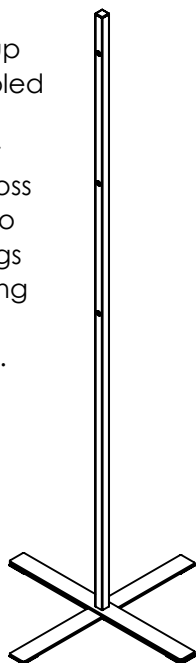

**STEP 5:** Peel off the protective plastic film from both sides of Divider Panel.

**STEP 6:** Align holes on left side of Divider Panel with corresponding hole locations in Metal Upright. Use supplied washers and screws to secure Panel to Metal Upright. Place washer onto Pan Head screw and then feed screw through hole in Divider Panel.

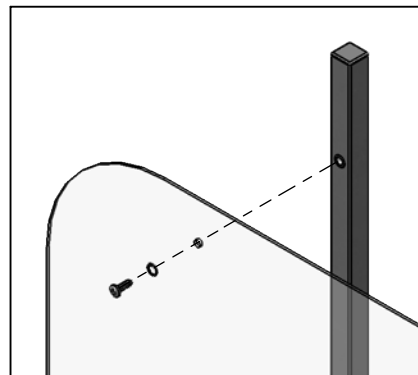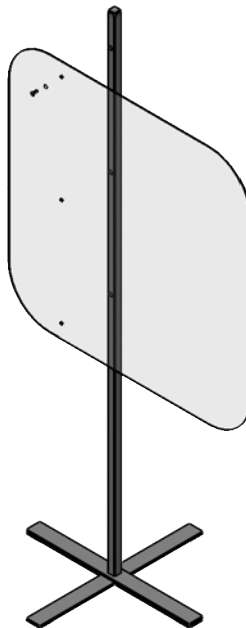

Pan Head  
Screw

Washer


**STEP 7:** Use screwdriver to tighten screw to Metal Upright. Repeat above steps for remaining two holes to fully secure Divider Panel to Metal Upright.



**ASSEMBLY COMPLETED**



14600

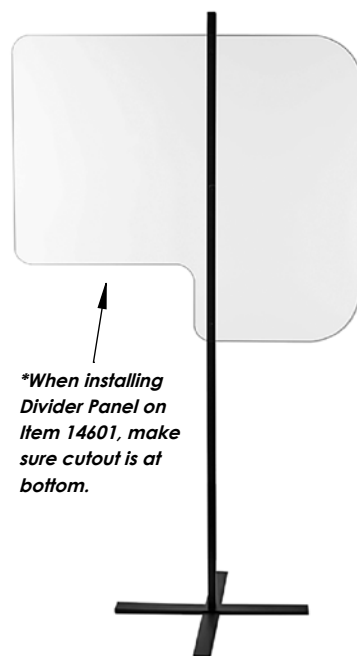

14601